

SPARE PARTS CATALOGUE

KUBOTA WATER-COOLED DIESEL ENGINE

MODEL: E75N

E75NB3

EA300-E2NB1

TABLE OF CONTENTS

Fig. No.	Description	E75N	E75NB3	EA300	Page
0001	Crankcase	✓	✓	✓	2
0003	Cylinder Head	✓	✓	✓	3
0004	Gear Case	✓	✓	✓	4-5
0005	Head Cover	✓	✓	✓	6
0006	Oil Filter	✓	✓	✓	7
0007	Oil Gauge	✓	✓	✓	8
0100	Main Bearing Case	✓	✓	✓	9
0101	Cam Shaft & Idler Shaft	✓	✓	✓	10
0102	Piston & Crankshaft	✓	✓	✓	11-12
010301	Flywheel	✓			13
010302	Flywheel		✓	✓	14
0106	Balancer			✓	15
0200	Engine Stop Lever	✓	✓	✓	16
0202	Fuel Injection Pump	✓	✓	✓	17
0203	Fuel Injection Pump (Details)	✓	✓	✓	18
0204	Governor	✓	✓	✓	19
0205	Speed Control Plate	✓	✓	✓	20
0206001	Nozzle Holder	✓	✓		21
0206002	Nozzle Holder			✓	22
0207001	Nozzle Holder (Details)	✓	✓		23
0207002	Nozzle Holder (Details)			✓	24-25
030001	Fuel Filter	✓			26
030002	Fuel Filter		✓		27
030003	Fuel Filter			✓	28
030401	Fuel Tank	✓			29
030402	Fuel Tank		✓		30
030403	Fuel Tank			✓	31
040401	Starter		✓		32
040402	Starter			✓	33
040501	Starter (Details)		✓		34
040502	Starter (Details)			✓	35
040601	Oil Switch	✓	✓		36
040602	Oil Switch			✓	37
0502	Radiator	✓	✓	✓	38
0504	Cooling Fan	✓	✓	✓	39
0406	Tension Pulley	✓	✓	✓	40
0600	Valve & Rocker Arm	✓	✓	✓	41
0603	Air Cleaner	✓	✓	✓	42
0605	Muffler	✓	✓	✓	43
0800	Glow Plug		✓	✓	44
0805	Start Handle & Side Cover	✓	✓	✓	45
0806	Bonnet	✓			46
080801	Accessories & Service Parts	✓	✓		47
080802	Accessories & Service Parts			✓	48
080901	Decals	✓			49
080902	Decals		✓		50
080903	Decals			✓	51
	PART NUMBER INDEX				52-58

0001 Crankcase

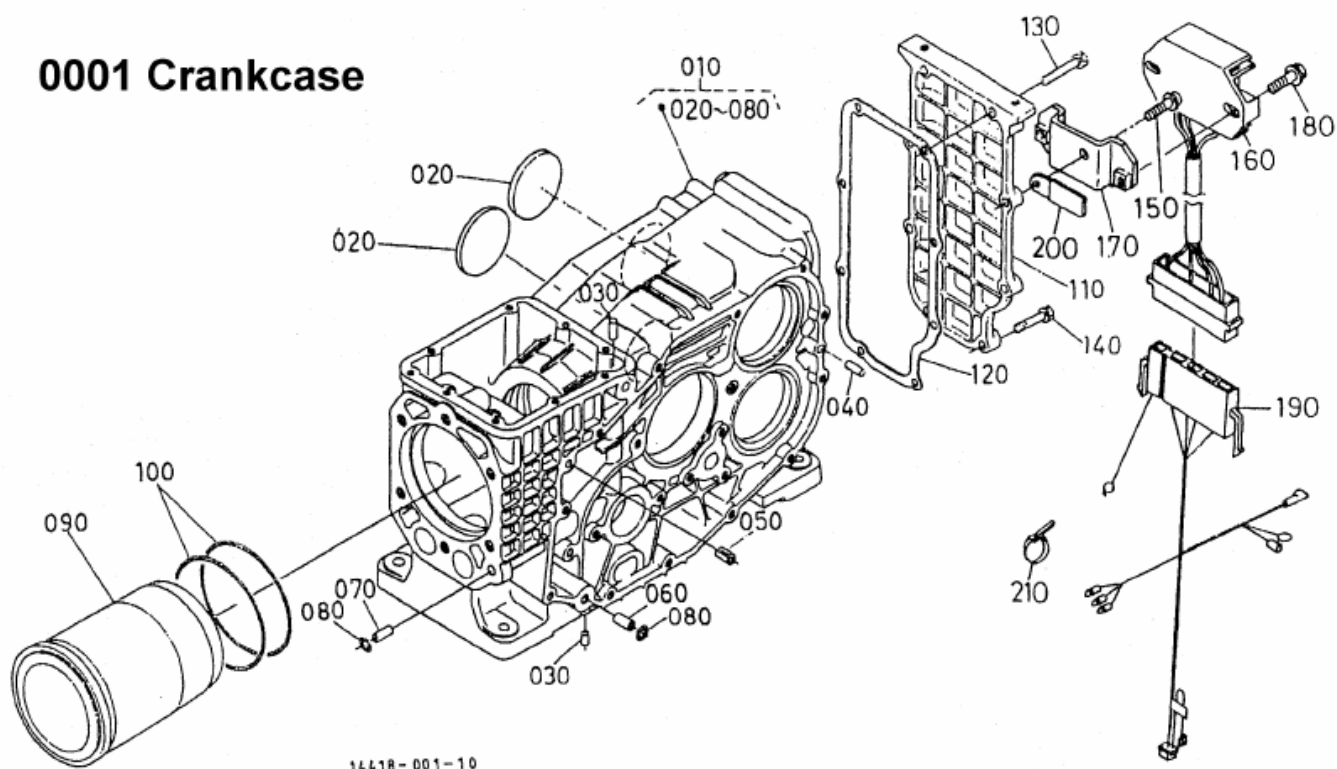


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0001	010	14418-0101-0	Crankcase Compl.	1	1		
0001	010	14642-0101-0	Crankcase Compl.			1	
0001	020	14971-2671-0	Seal Plug	2	2	2	
0001	030	14301-3363-0	Pin Plug	2	2	1	
0001	040	05012-00612	Parallel Pin	1	1	1	
0001	050	05411-00412	Spring Pin	1	1	1	
0001	060	14911-9493-0	Pipe Pin	1	1	1	
0001	070	14301-3395-0	Pipe Pin	1	1	1	
0001	080	04811-00080	O Ring	2	2	2	
0001	090	14286-0231-0	Cylinder Liner	1	1		
0001	090	14971-0231-0	Cylinder Liner			1	
0001	100	14971-0235-0	O Ring	2	2	2	
0001	110	14971-0471-0	Crankcase Cover	1	1	1	
0001	120	14595-0472-0	Packing, Crankcase Cover	1	1	1	
0001	130	01023-50635	Bolt	2	2	2	
0001	140	01023-50625	Bolt	6	5	5	
0001	150	01754-50625	Flange Bolt		1	1	
0001	160	14428-6460-0	Regulator Assy		1	1	
0001	170	11420-6461-0	Regulator Stay		1	1	
0001	180	01754-50620	Flange Bolt		2	2	
0001	190	15272-6757-0	Cord Clamp			1	
0001	190	14416-6505-0	Wire Harness Assy #1		1		
0001	200	15241-6758-0	Cable Clamp		1		
0001	210	34350-2938-0	Cable Band		1		

0003 Cylinder Head

FIG.No.0600 010~050

010 020 060 070 100 080 090 030 110 040 050 060

090 15901-0354-0

11735-002-10

14995-800-10

Kubota PL2006

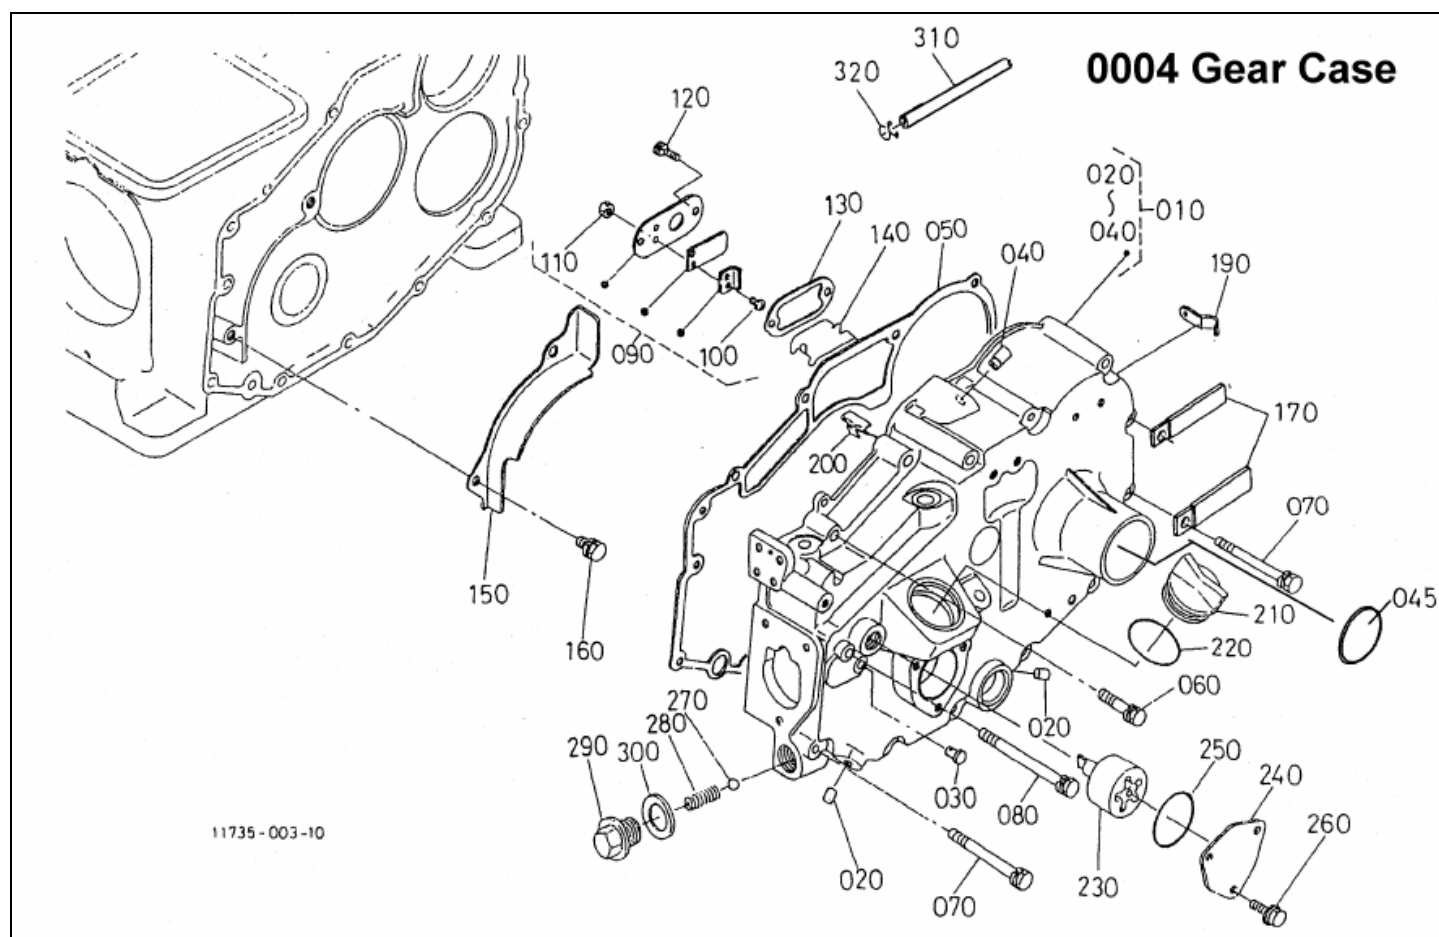


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0004	010	14971-0402-0	Gear Case Compl.	1	1		Sr. No. ~591098
0004	010	14971-0402-2	Gear Case Compl.	1	1		Sr. No. 591099 ~
0004	010	14971-0402-3	Gear Case Compl.	1	1		Sr. No. 705500 ~
0004	010	1G102-0402-0	Gear Case Compl.			1	
0004	020	14301-3363-0	Pin Plug	2	2	2	
0004	030	14971-6629-0	Pin, Idle Spring	1	1	1	
0004	040	14971-0555-0	Joint, Breather Pipe	1	1		Sr. No. ~ 700683
0004	040	14971-0555-2	Joint, Breather Pipe	1	1		Sr. No. 700684 ~
0004	040	14971-0555-2	Joint, Breather Pipe			1	
0004	045	36730-2463-0	Plug, 35x7			1	
0004	050	14595-0413-0	Packing, Gear Case	1	1	1	
0004	060	01023-50635	Bolt	2	2	2	
0004	070	01023-50665	Bolt	9	9	9	
0004	080	01023-50680	Bolt	1	1	1	
0004	090	14971-0501-2	Breather Assy	1	1		Incl. 100~130
0004	090	11420-0501-2	Breather Assy			1	Incl. 100~130
0004	100	03024-50408	Screw	2	2	2	
0004	110	02054-50040	Nut	2	2	2	
0004	120	03024-50510	Screw	2	2	2	
0004	130	14595-0543-0	Packing, Breather	1	1	1	
0004	140	14971-0547-0	Inner Plate, Breather	1	1	1	
0004	150	14971-0537-0	Oil Guard, Breather	1	1	1	
0004	160	01023-50612	Bolt	2	2	2	
0004	170	15241-6758-0	Cable Clamp		2		
0004	190	15272-6757-0	Cable Clamp	1	1		
0004	200	14971-0538-0	Oil Guard (2), Breather	1	1	1	
0004	210	15852-3314-0	Oil Filler Plug	1	1	1	
0004	220	04811-50300	O Ring	1	1	1	

0005 Head Cover

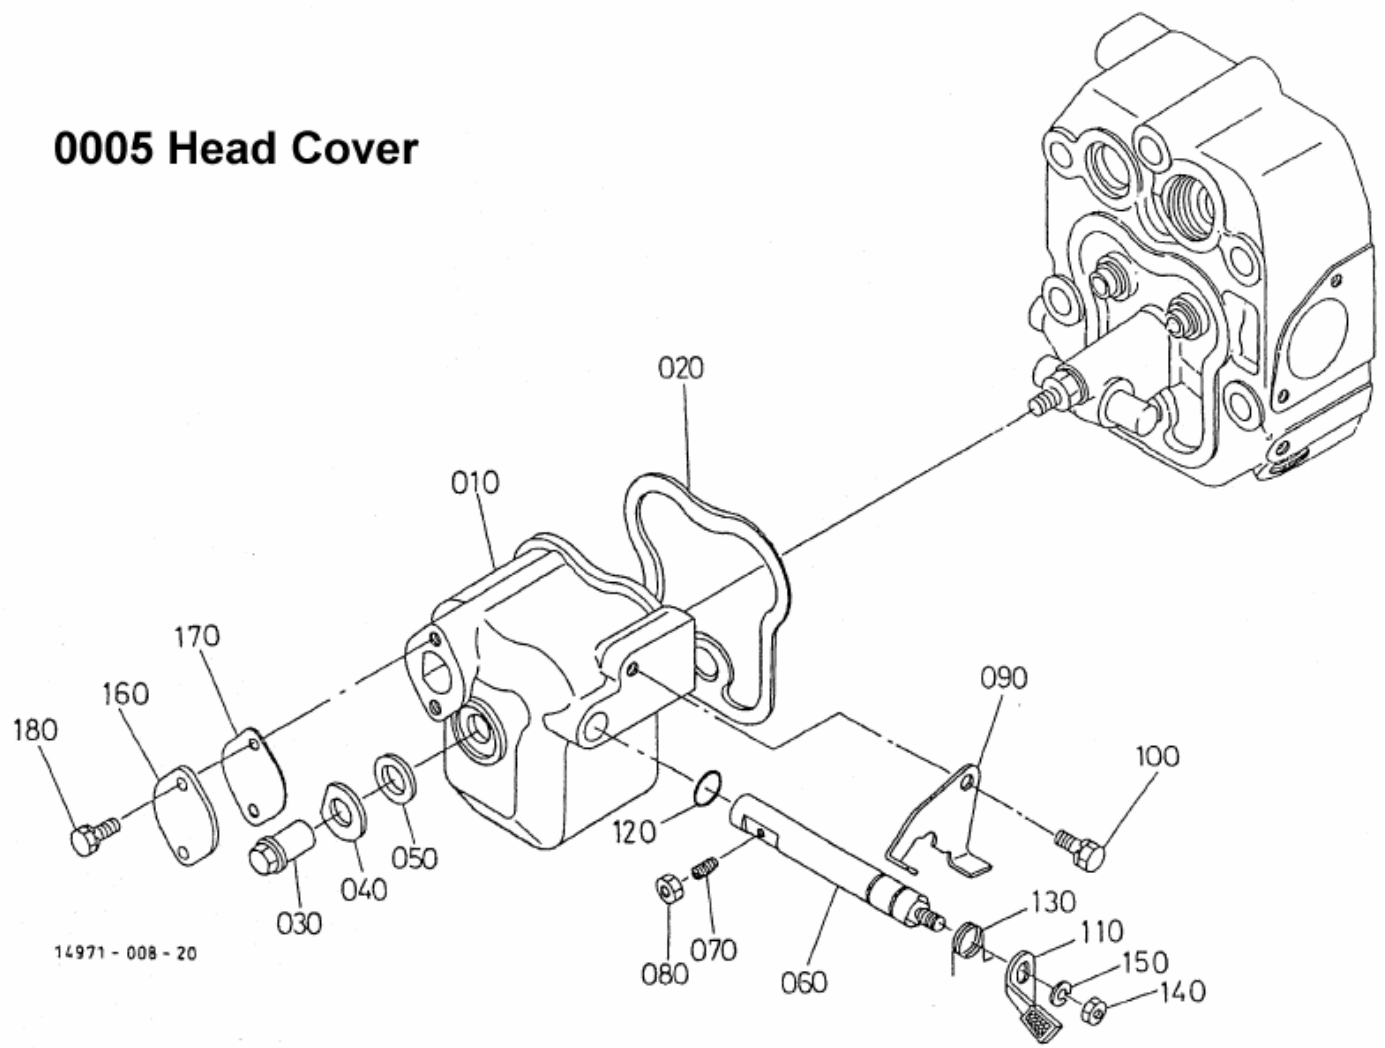


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0005	010	14971-1451-0	Head Cover	1	1		Sr. No. ~ 700683
0005	010	14971-1451-2	Head Cover	1	1		Sr. No. 700684 ~
0005	010	14971-1451-2	Head Cover			1	
0005	020	14971-1452-0	Packing, Head Cover	1	1	1	
0005	030	15261-1462-0	Nut, Head Cover	1	1	1	
0005	040	15261-1464-0	Washer, Head Cover	1	1	1	
0005	050	15261-1463-0	Packing, Head Cover	1	1	1	
0005	060	14971-6632-0	Shaft, Decompression	1	1	1	
0005	070	15261-6635-0	Bolt, Decompression	1	1	1	
0005	080	02056-50050	Nut	1	1	1	
0005	090	14971-6655-0	Stopper, Decomp. Shaft	1	1		Sr. No. ~ 700683
0005	090	14971-6655-2	Stopper, Decomp. Shaft	1	1		Sr. No. 700684 ~
0005	090	14971-6655-2	Stopper, Decomp. Shaft			1	
0005	100	01023-50612	Bolt	1	1	1	
0005	110	14301-6631-0	Lever Compl. Decom.	1	1	1	
0005	120	19701-9685-0	O Ring	1	1	1	
0005	130	14971-6621-0	Spring, Decompression	1	1	1	
0005	140	02014-50060	Nut	1	1	1	
0005	150	04512-60060	Spring Washer	1	1	1	
0005	160	15261-6663-0	Cover	1	1	1	
0005	170	15263-6664-0	Packing, Cover	1	1	1	
0005	180	01023-50614	Bolt	2	2	2	

0007 Oil Gauge

010

Kubota PL2006


0101 Cam Shaft & Idler Shaft

This exploded view diagram illustrates the assembly of the 0101 Cam Shaft and Idler Shaft. The components are shown in their relative positions, with callout numbers 010 through 080 identifying the various parts. The diagram includes the camshaft housing, the camshaft itself, the idler shaft, and the timing gears. The assembly is shown in a disassembled state, allowing for a clear view of the individual components and their relationships.

14971-009-20

Kubota PL2006

 
0102 Piston & Crankshaft

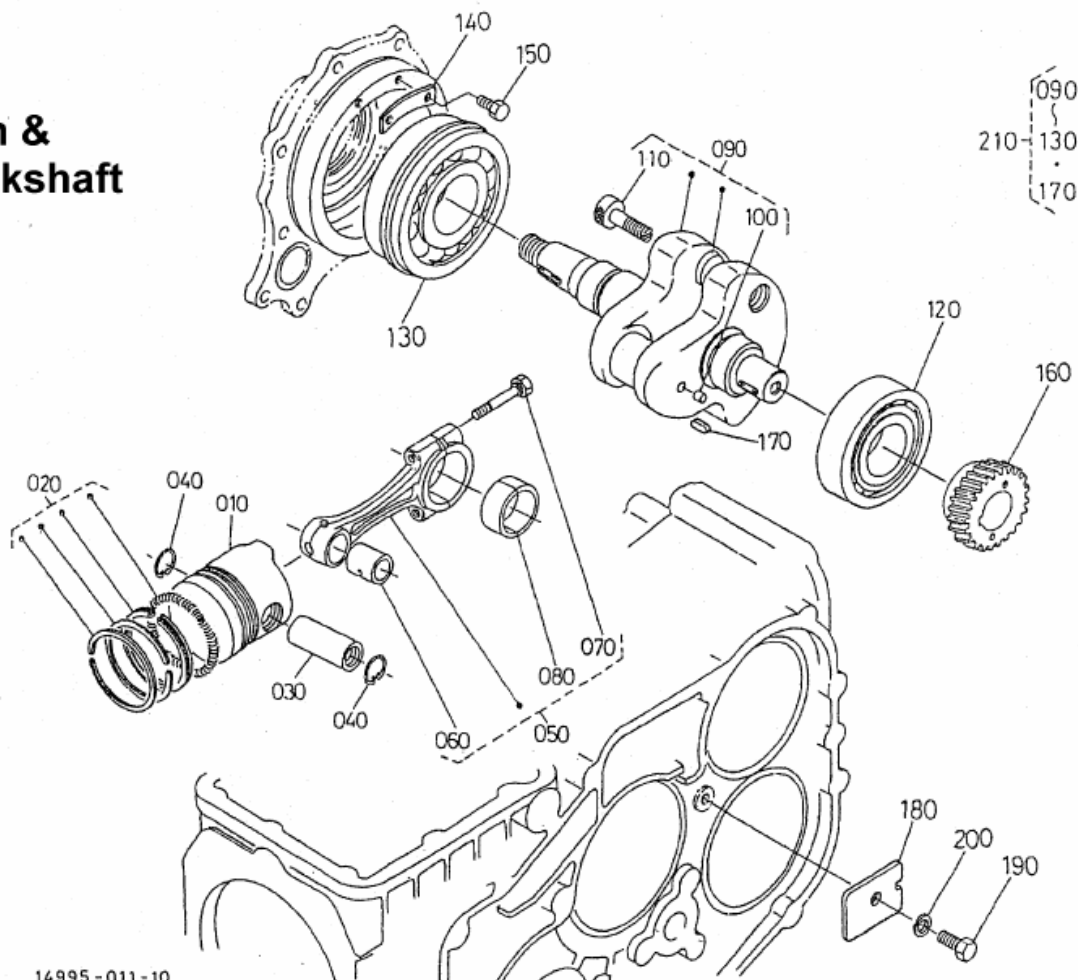

14995-011-10

Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0102	010	14286-2111-0	Piston	1	1		
0102	010	15532-2111-0	Piston			1	
0102	010	15531-2191-0	Piston, OS 0.5mm			1	
0102	020	14286-2105-0	Ring Assy	1	1		
0102	020	15531-2105-0	Ring Assy			1	
0102	020	15531-2109-0	Ring Assy, OS0.50mm			1	
0102	030	15261-2131-0	Pin, Piston	1	1	1	
0102	040	15261-2133-0	Circlip, Piston Pin	2	2	2	
0102	050	15694-2201-0	Connecting Rod Assy	1	1	1	
0102	060	15261-2198-0	Bush, Piston Pin	1	1	1	
0102	070	15381-2214-0	Connecting Rod Bolt	2	2	2	
0102	080	15694-2231-0	Metal, Crank Pin	1	1	1	
0102	080	15694-2297-0	Metal, Crank Pin	1	1	1	Undersize 0.20mm
0102	080	15694-2298-0	Metal, Crank Pin	1	1	1	Undersize 0.40mm
0102	090	14981-2301-2	Crank Shaft Compl.	1	1		
0102	090	14971-2301-2	Crankshaft Compl.			1	
0102	100	14941-2324-0	Plug	1	1	1	
0102	110	14981-9143-0	Bolt	4	4		
0102	120	14971-2345-0	Main Bearing (1)	1	1	1	
0102	130	14971-2346-0	Main Bearing (2)	1	1		Sr. No. ~855173
0102	130	14981-2346-0	Main Bearing (2)	1	1		Sr. No. 855174 ~
0102	130	14981-2346-0	Main Bearing 2			1	
0102	140	14971-2359-0	Stopper, Bearing	1	1	1	
0102	150	01053-50512	Bolt	2	2	2	
0102	160	14971-2411-0	Crank Gear	1	1	1	
0102	170	05712-00515	Feather Key	1	1	1	

Piston & Crankshaft

[illegible]

010301 Flywheel (E75N)

060
050
030
040
010
020

14417-001-10

[illegible]

**6 Balancer
A300-E2NB1)**

This diagram illustrates the exploded view of the 6 Balancer (A300-E2NB1) assembly. The components are labeled with part numbers:

- 030**: Two rollers or wheels at the top left.
- 010**: Two main housing or bracket components.
- 070**: Two small pins or screws.
- 020**: Two large gears or pulleys.
- 050**: One medium-sized gear.
- 040**: One small gear.
- 060**: One very small gear.
- 080**: A small rectangular plate or bracket.
- 100**: A small pin or screw.
- 090**: A longer screw or bolt.

The diagram shows the assembly sequence, with lines indicating the fit and alignment of the parts. The main housing (010) is shown with the rollers (030) and gears (020, 050, 040, 060) being installed. The plate (080) and screws (100, 090) are shown being attached to the bottom of the assembly.

19701-011-10

19701-011-10

[illegible]

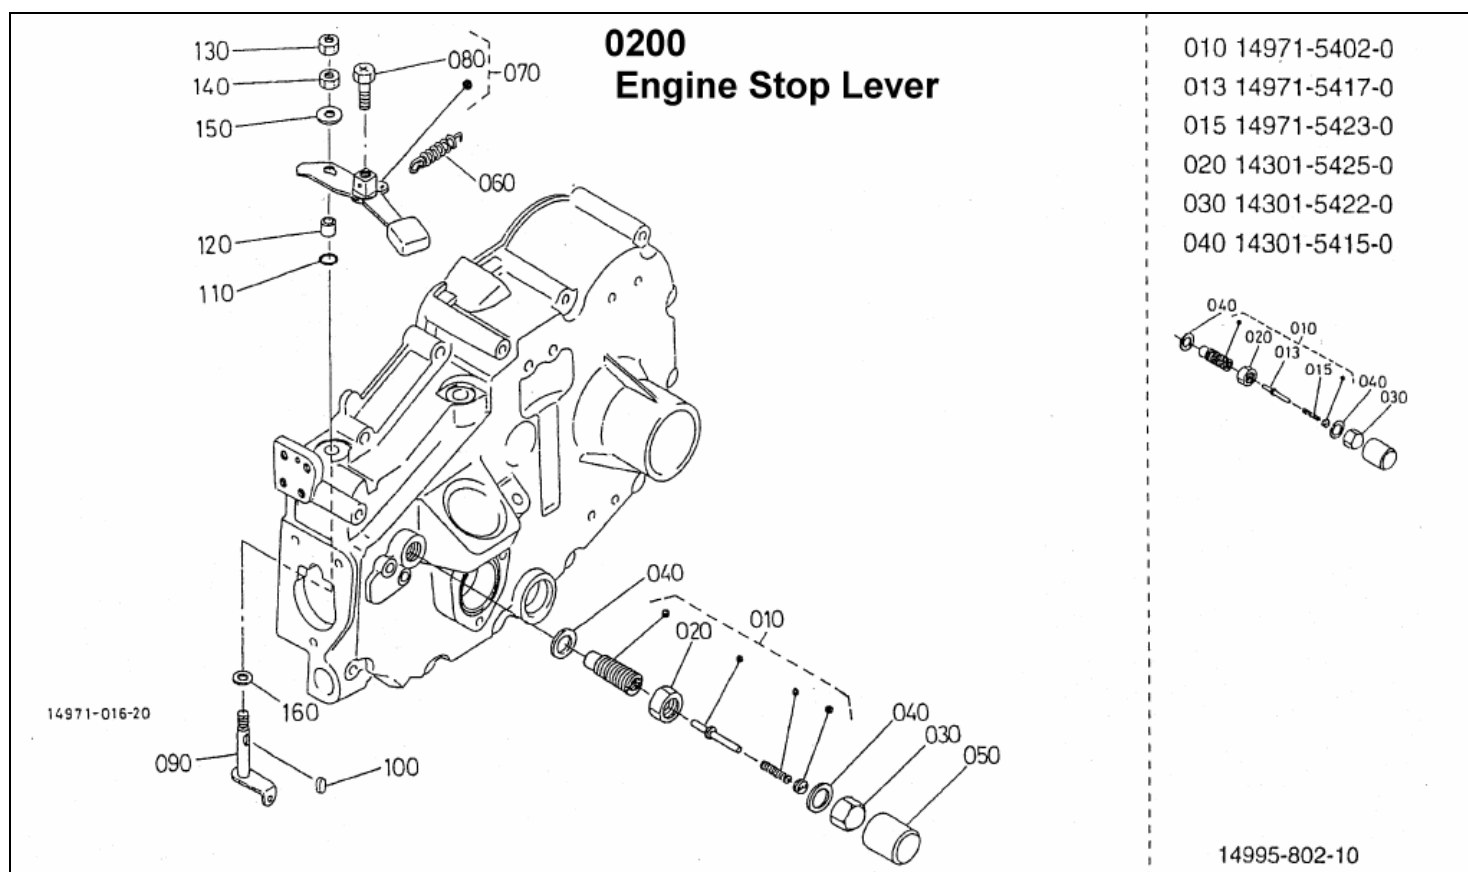


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0200	010	14971-5402-0	Limiter Assy, Fuel	1	1		Sr. No. ~593243
0200	010	14982-5402-0	Limiter Assy, Fuel	1	1		Sr. No. 593244 ~
0200	010	1G111-5402-0	Limiter Assy, Fuel			1	
0200	013	14971-5417-0	Pin, Fuel Limitter	1	1		Sr. No. ~593243
0200	015	14971-5423-0	Spring	1	1		Sr. No. ~593243
0200	020	14301-5425-0	Lock Nut	1	1		Sr. No. ~593243
0200	020	15261-5437-0	Lock Nut	1	1		Sr. No. 593244 ~
0200	030	14301-5422-0	Cap Nut	1	1		Sr. No. ~593243
0200	030	15261-5422-0	Cap Nut	1	1		Sr. No. 593244 ~
0200	030	15261-5422-0	Cap Nut			1	
0200	040	14301-5415-0	Packing	2	2		Sr. No. ~593243
0200	040	15109-3366-0	Packing	2	2		Sr. No. 593244 ~
0200	040	15109-3366-0	Packing			2	
0200	050	14301-5442-0	Cap	1	1		
0200	050	1G121-5429-0	Pipe			1	
0200	060	14971-5654-0	Stop Spring	1	1		Sr. No. ~783212
0200	060	14658-5654-3	Stop Spring	1	1		Sr. No. 783213 ~
0200	060	14658-5654-3	Stop Spring			1	
0200	070	11992-5704-0	Speed Control Lever Assy	1	1	1	
0200	080	01222-50608	Bolt	1	1	1	
0200	090	14971-5723-0	Shaft Compl., Speed Control	1	1	1	
0200	100	15261-9501-0	Feather Key	1	1	1	
0200	110	04811-00070	O Ring	1	1	1	
0200	120	15263-5738-0	Friction Plate	1	1	1	
0200	130	02012-60060	Nut	1	1	1	
0200	140	02056-50060	Nut	1	1	1	
0200	150	04013-60060	Washer	1	1	1	
0200	160	04012-50080	Washer	1	1	1	

0202 Fuel Injection Pump

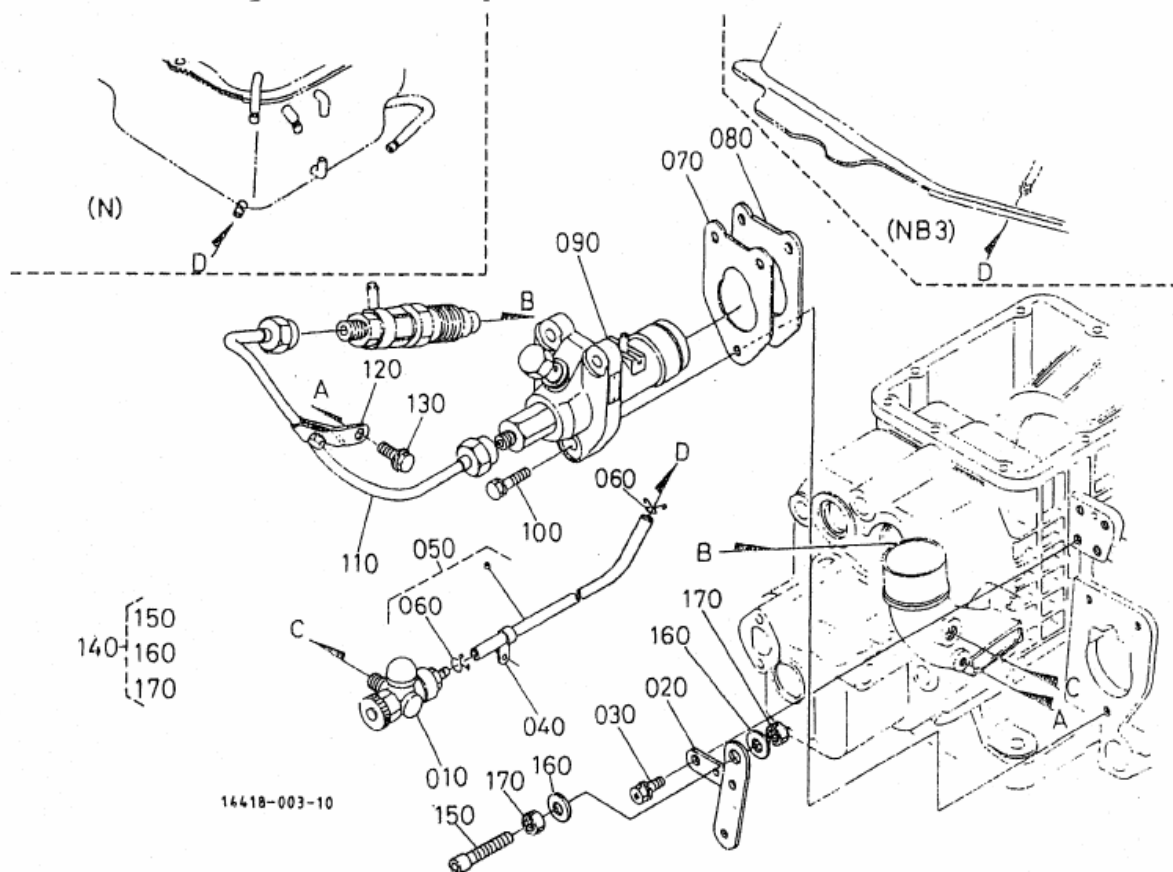


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0202	010	14541-4290-2	Jet Start Assy	1	1		
0202	020	14971-4292-0	Holder, Jet Start	1	1		Sr. No. ~ 700683
0202	020	14971-4292-2	Holder, Jet Start	1	1		Sr. No. 700684 ~
0202	020	14971-4292-2	Jet Start Holder			1	
0202	030	01023-50616	Bolt	2	2	2	
0202	040	14911-6754-0	Cord Clamp	1	1		
0202	050	11131-4287-0	Pipe Assy 1, Jet Start	1			
0202	050	14952-4250-0	Pipe Assy 2, Fuel Over Flow		1		
0202	060	14971-4275-0	Clip, Pipe	2	2		
0202	070	14971-5211-0	Shim, Pump Adjust	4	4	4	0.15mm
0202	070	1G111-5211-0	Pump Adjusting Shim (t=0.10mm)			2	
0202	080	14971-5212-0	Shim 2, Pump Adjust	2	2	1	0.50mm
0202	090	14971-5101-0	Injection Pump Assy	1	1		Sr. No. ~ 700683
0202	090	14971-5101-2	Injection Pump Assy	1	1		Sr. No. 700684 ~
0202	090	1G111-5101-2	Injection Pump Assy			1	
0202	100	01023-50622	Bolt	3	3	3	
0202	110	14971-5371-0	Injection Pipe	1	1		Sr. No. ~ 700683
0202	110	14971-5371-3	Injection Pipe	1	1		Sr. No. 700684 ~
0202	110	1G101-5371-0	Injection Pipe			1	
0202	120	14971-5385-0	Clip, Pipe	1	1		Sr. No. ~ 700683
0202	120	14971-5385-2	Clamp, Pipe	1	1		Sr. No. 700684 ~
0202	120	14971-5385-2	Clamp, Pipe			1	
0202	130	01754-50614	Flange Bolt	1	1	1	
0202	140	14913-5766-0	Throttle Wire Holder Assy	1	1	1	
0202	150	14913-5767-0	Throttle Wire Holder	1	1	1	
0202	160	04012-50080	Washer	2	2	2	
0202	170	02116-50080	Nut	2	2	2	

0203 F.I. Pump (Details)


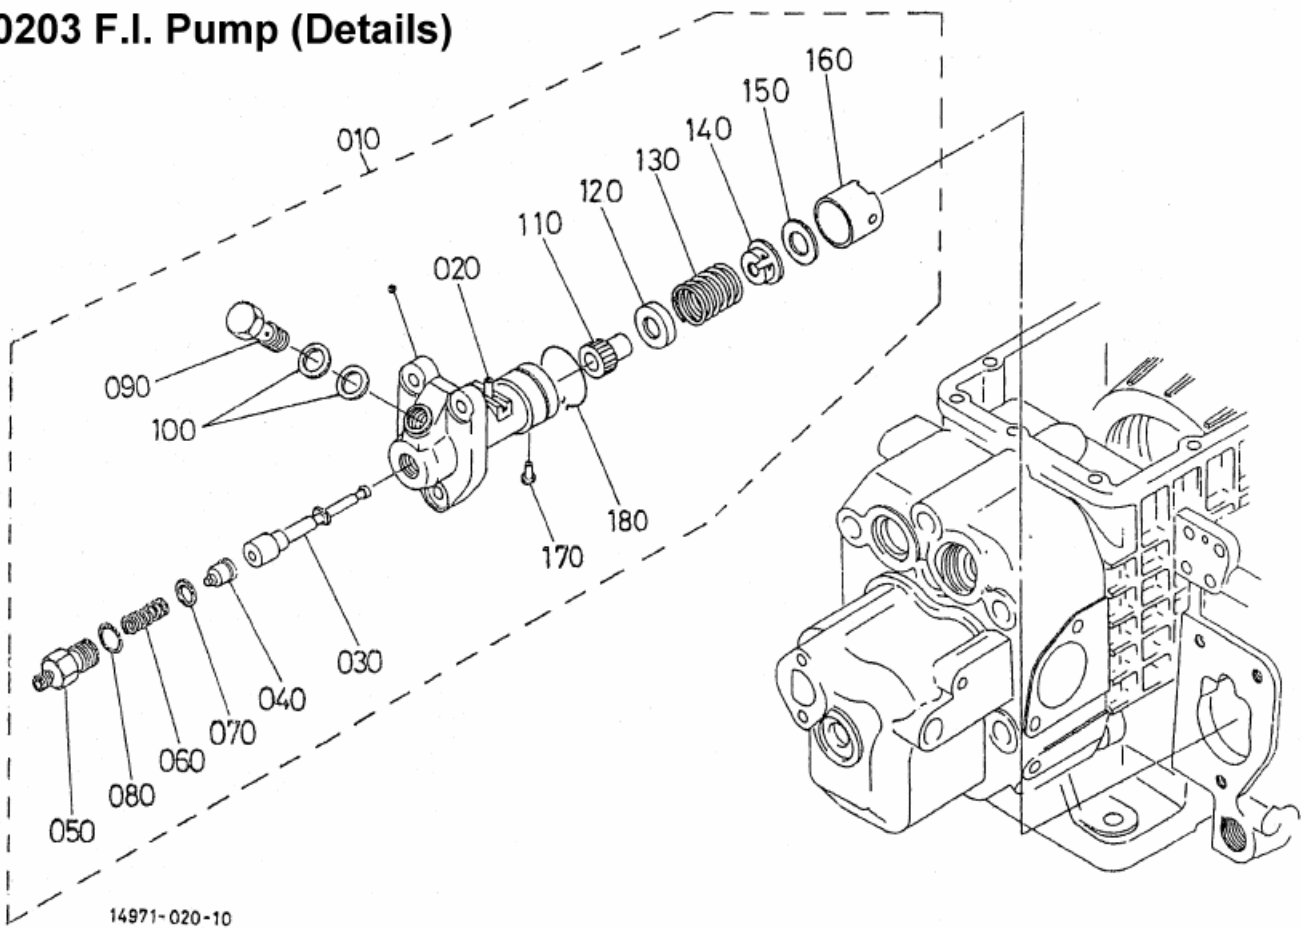



Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0203	010	14971-5101-0	Injection Pump Assy	1	1		Sr. No. ~ 700683
0203	010	14971-5101-2	Injection Pump Assy	1	1		Sr. No. 700684 ~
0203	010	1G111-5101-2	Injection Pump Assy			1	
0203	020	14911-5106-0	Control Rack	1	1	1	
0203	030	14911-5105-0	Pump Element	1	1	1	
0203	040	15221-5103-0	Valve, Delivery	1	1	1	
0203	050	15601-5122-0	Holder, Delivery Valve	1	1		
0203	050	15271-5122-0	Holder, Delivery Valve			1	
0203	060	15221-5123-0	Spring, Delivery Valve	1	1	1	
0203	070	15221-5124-0	Gasket, Delivery Valve	1	1	1	
0203	080	14611-5120-0	O Ring	1	1	1	
0203	090	14911-5132-0	Screw	1	1	1	
0203	100	14107-5134-0	Packing	2	2	1	
0203	110	15221-5138-2	Control Sleeve	1	1	1	
0203	120	15221-5127-0	Spring Seat, Upper	1	1	1	
0203	130	15221-5128-0	Plunger Spring	1	1	1	
0203	140	15221-5129-0	Spring Seat, Lower	1	1	1	
0203	150	14109-5130-0	Shim Plate	1	1	1	
0203	160	15221-5107-0	Tappet Assy	1	1	1	
0203	170	15221-5125-0	Pin, Tappet Guide	1	1	1	
0203	180	14911-5143-0	Clamp Pin	1	1	1	

0205 Speed Control Plate

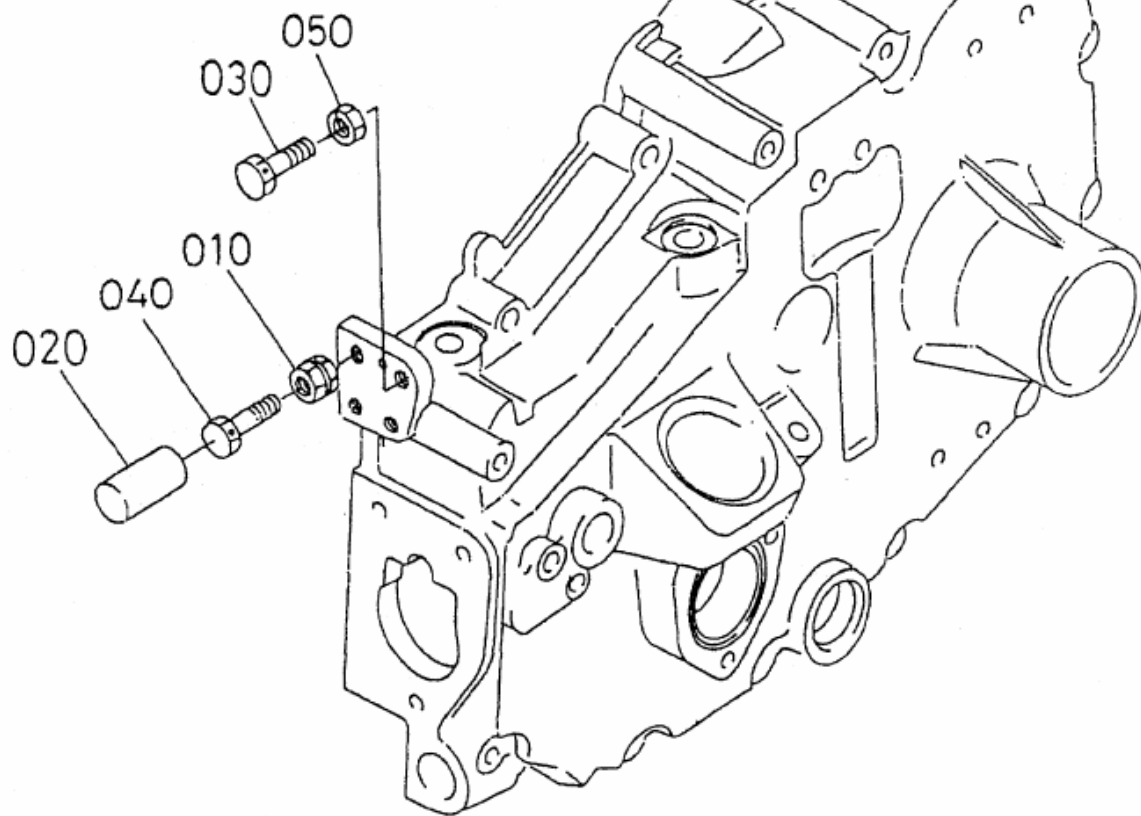

14418-017-10

[illegible]

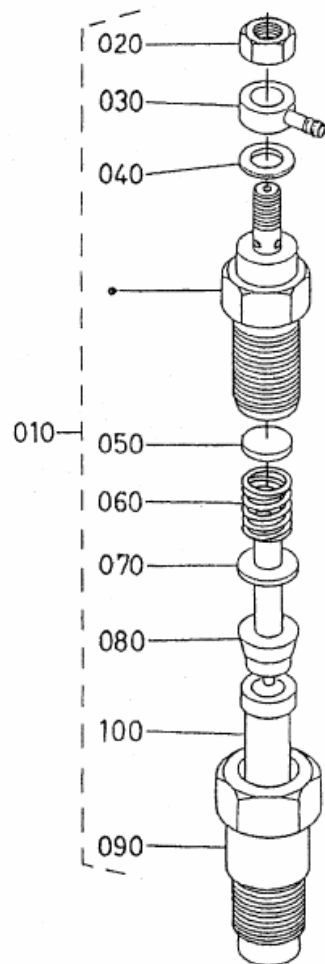

**0207001 Nozzle Holder
(E75N)
(E75NB3)**

[illegible]

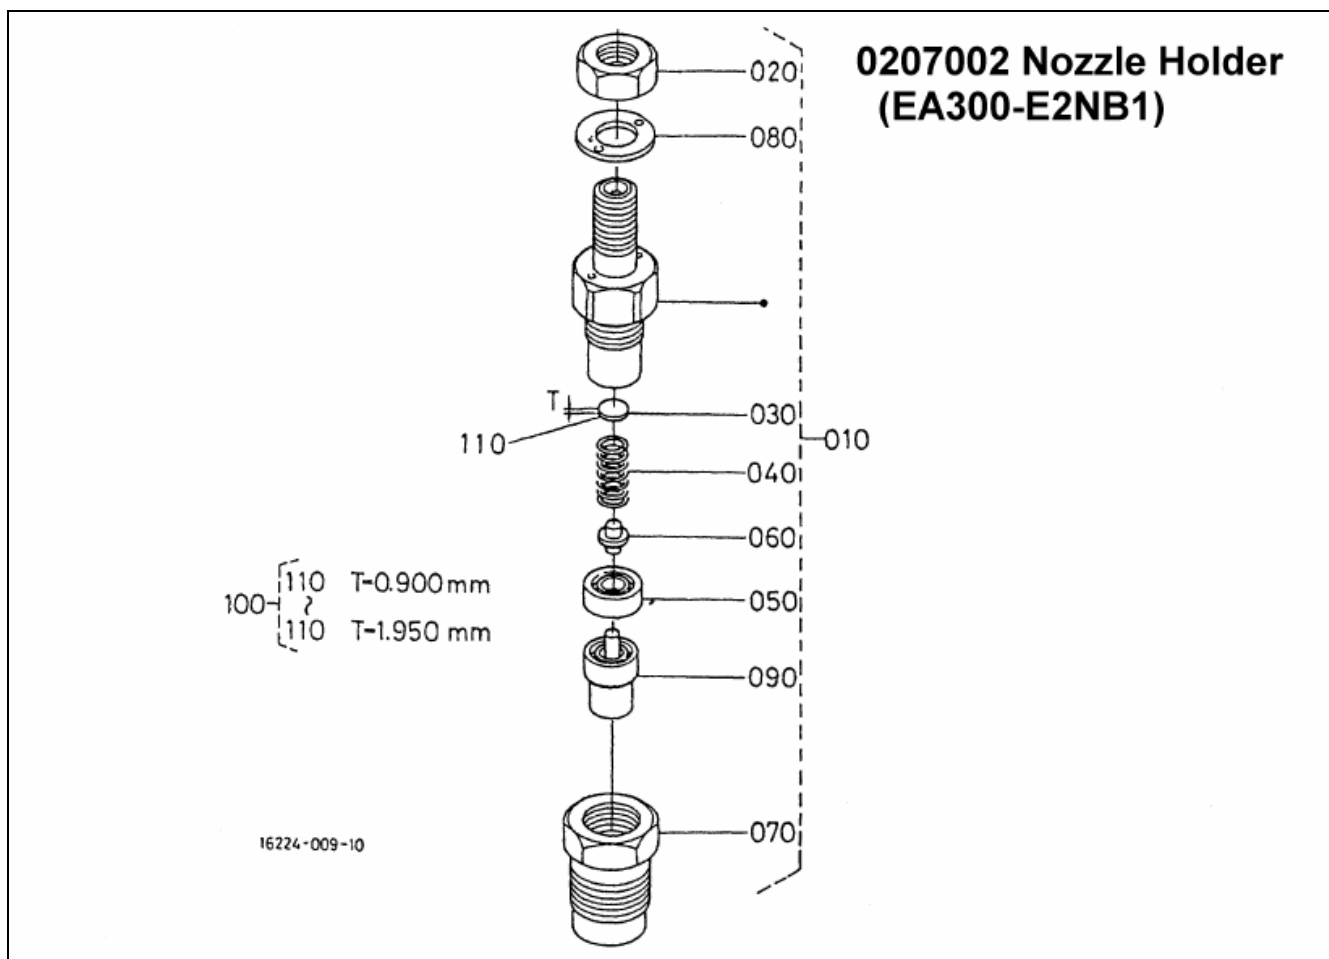


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0207002	010	1G101-5390-0	Nozzle Holder Assy			1	
0207002	020	15841-9203-0	Nut			1	
0207002	030	15841-5323-0	Adjusting Washer			1	
0207002	040	15841-5317-0	Nozzle Spring			1	
0207002	050	15841-5335-0	Distance Piece			1	
0207002	060	15841-5316-0	Push Rod			1	
0207002	070	16475-5328-0	Nozzle Nut			1	
0207002	080	15841-9404-0	Washer			1	
0207002	090	15841-5361-0	Nozzle Piece			1	
0207002	100	15841-9810-0	Adjusting Washer Assy			1	
0207002	110	15841-5323-0	Adjusting Washer, 0.900mm			1	
0207002	110	15841-9851-0	Adjusting Washer, 0.925mm			1	
0207002	110	15841-9852-0	Adjusting Washer, 0.950mm			1	
0207002	110	15841-9853-0	Adjusting Washer, 0.975mm			1	
0207002	110	15841-9854-0	Adjusting Washer, 0.1000mm			1	
0207002	110	15841-9855-0	Adjusting Washer, 0.1025mm			1	
0207002	110	15841-9856-0	Adjusting Washer, 0.1050mm			1	
0207002	110	15841-9857-0	Adjusting Washer, 0.1075mm			1	
0207002	110	15841-9858-0	Adjusting Washer, 0.1100mm			1	
0207002	110	15841-9859-0	Adjusting Washer, 0.1125mm			1	
0207002	110	15841-9560-0	Adjusting Washer, 0.1150mm			1	
0207002	110	15841-9861-0	Adjusting Washer, 0.1175mm			1	
0207002	110	15841-9862-0	Adjusting Washer, 0.1200mm			1	
0207002	110	15841-9863-0	Adjusting Washer, 0.1225mm			1	
0207002	110	15841-9864-0	Adjusting Washer, 0.1250mm			1	
0207002	110	15841-9865-0	Adjusting Washer, 0.1275mm			1	
0207002	110	15841-9866-0	Adjusting Washer, 0.1300mm			1	
0207002	110	15841-9867-0	Adjusting Washer, 0.1325mm			1	


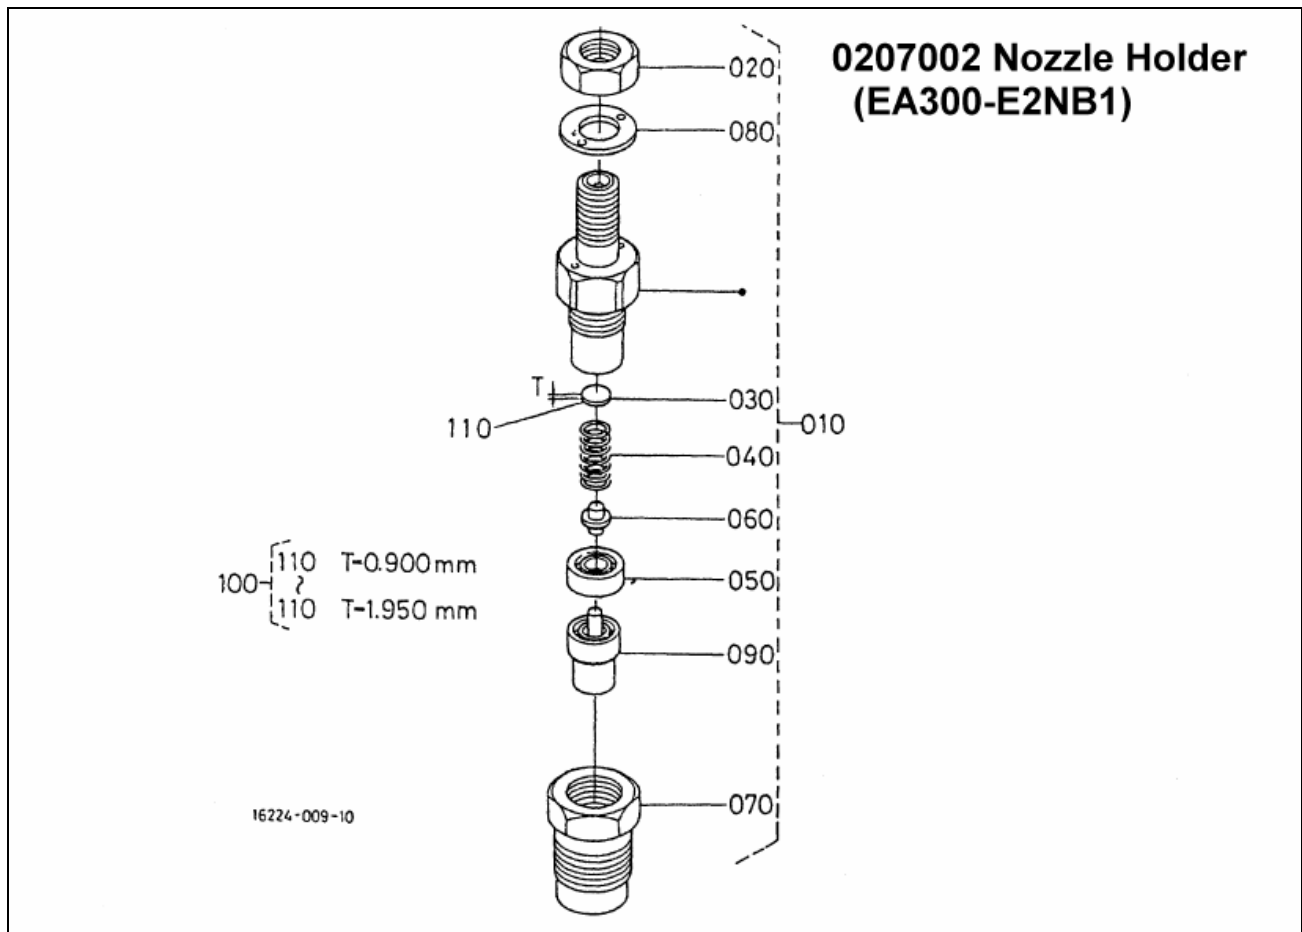


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0207002	110	15841-9868-0	Adjusting Washer, 0.1350mm			1	
0207002	110	15841-9869-0	Adjusting Washer, 0.1375mm			1	
0207002	110	15841-9870-0	Adjusting Washer, 0.1400mm			1	
0207002	110	15841-9871-0	Adjusting Washer, 0.1425mm			1	
0207002	110	15841-9872-0	Adjusting Washer, 0.1450mm			1	
0207002	110	15841-9873-0	Adjusting Washer, 0.1475mm			1	
0207002	110	15841-9874-0	Adjusting Washer, 0.1500mm			1	
0207002	110	15841-9875-0	Adjusting Washer, 0.1525mm			1	
0207002	110	15841-9876-0	Adjusting Washer, 0.1550mm			1	
0207002	110	15841-9877-0	Adjusting Washer, 0.1575mm			1	
0207002	110	15841-9878-0	Adjusting Washer, 0.1600mm			1	
0207002	110	15841-9879-0	Adjusting Washer, 0.1625mm			1	
0207002	110	15841-9880-0	Adjusting Washer, 0.1650mm			1	
0207002	110	15841-9881-0	Adjusting Washer, 0.1675mm			1	
0207002	110	15841-9882-0	Adjusting Washer, 0.1700mm			1	
0207002	110	15841-9883-0	Adjusting Washer, 0.1725mm			1	
0207002	110	15841-9884-0	Adjusting Washer, 0.1750mm			1	
0207002	110	15841-9885-0	Adjusting Washer, 0.1775mm			1	
0207002	110	15841-9886-0	Adjusting Washer, 0.1800mm			1	
0207002	110	15841-9887-0	Adjusting Washer, 0.1825mm			1	
0207002	110	15841-9888-0	Adjusting Washer, 0.1850mm			1	
0207002	110	15841-9889-0	Adjusting Washer, 0.1875mm			1	
0207002	110	15841-9890-0	Adjusting Washer, 0.1900mm			1	
0207002	110	15841-9891-0	Adjusting Washer, 0.1925mm			1	
0207002	110	15841-9892-0	Adjusting Washer, 0.1950mm			1	


[illegible]

030003 Fuel Filter (EA300-E2NB1)

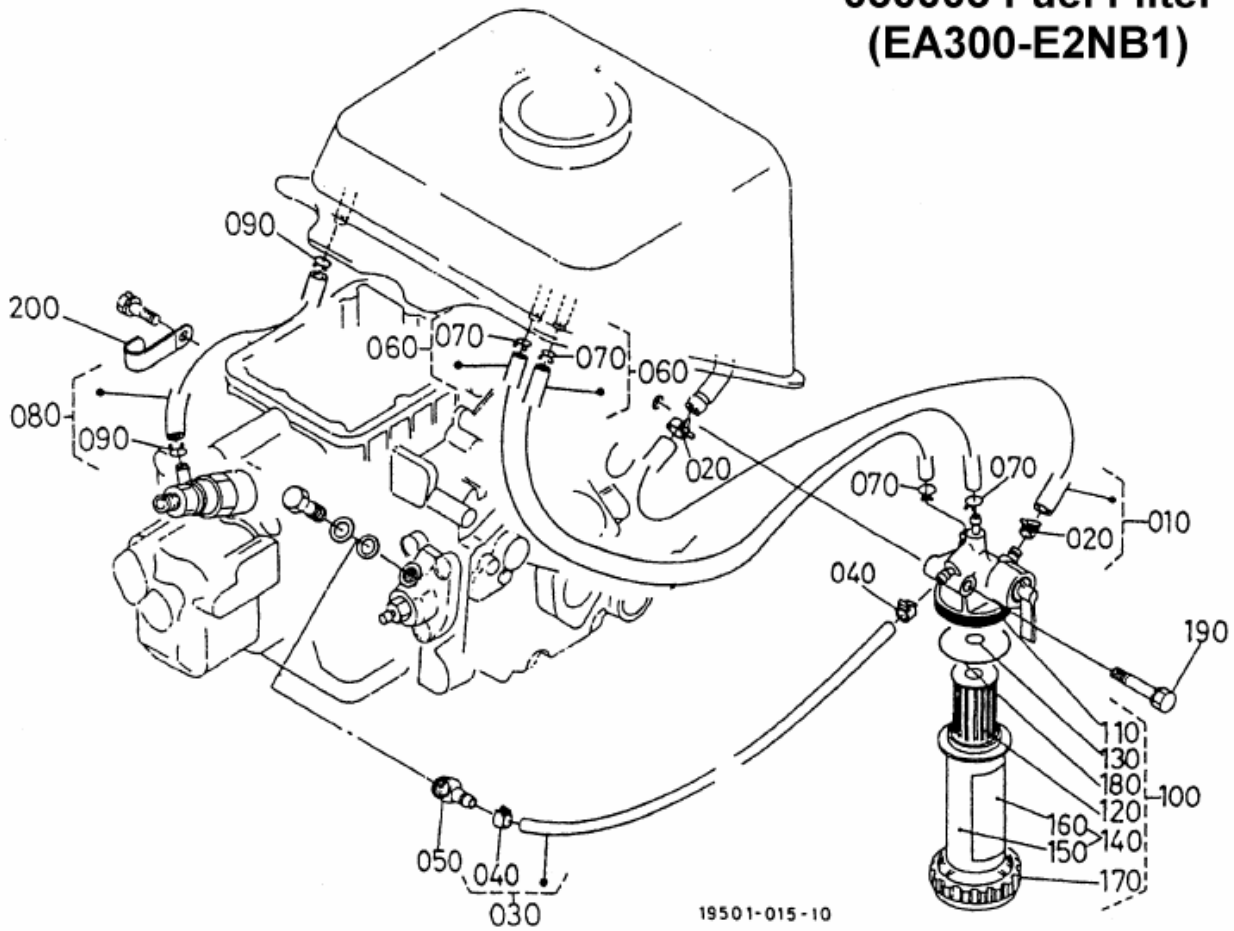

19501-015-10

Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
030003	010	14279-4201-0	Fuel Pipe Assy			1	
030003	020	14911-4275-0	Pipe Clip			2	
030003	030	14971-4202-0	Fuel Pipe Assy			1	
030003	040	19411-4275-0	Pipe Clip			2	
030003	050	14111-4241-0	Eye Joint			1	
030003	060	14279-4220-0	Air Vent Pipe Assy			2	
030003	070	14971-4275-0	Pipe Clip			4	
030003	080	14279-4250-0	Overflow Pipe Assy			1	
030003	090	14971-4275-0	Pipe Clip			2	
030003	100	14911-4301-4	Fuel Filter Assy			1	
030003	110	14911-4351-3	Filter Body Compl.			1	
030003	120	15231-4356-0	Element Assy			1	
030003	130	14301-4357-0	O Ring, Filter			1	
030003	140	15393-4310-0	Filter Cup Assy			1	
030003	150	15393-4358-0	Filter Cup			1	
030003	160	16873-8843-0	Decal, Fuel Filter			1	
030003	170	14301-4359-0	Retaining Ring			1	
030003	180	14301-4365-0	O Ring, Filter Cup			1	
030003	190	01123-50485	Bolt			1	
030003	200	15272-6757-0	Cord Clamp			2	

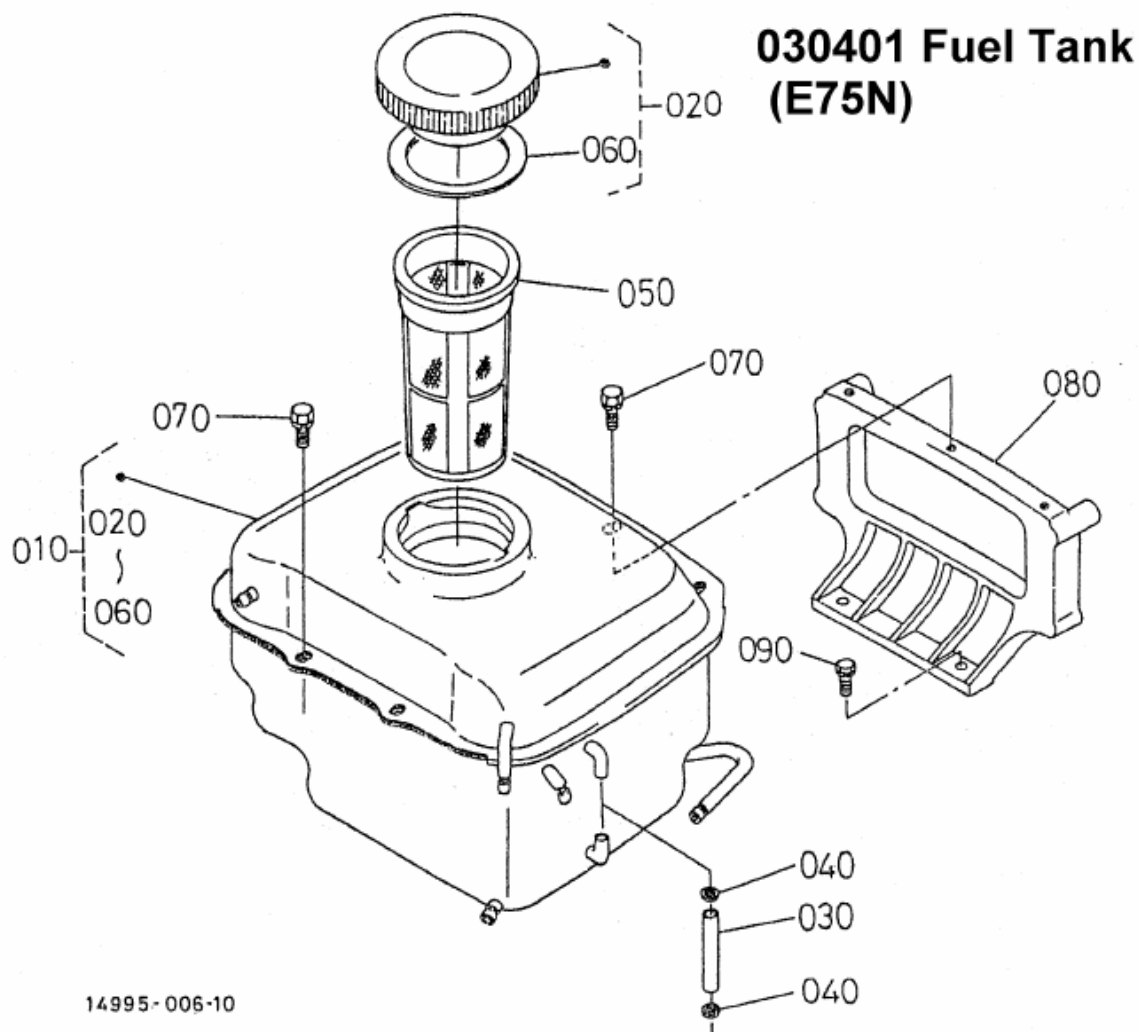[illegible]

030402 Fuel Tank (E75NB3)

010

020

025

050

080

110

130

120

130

140

140

060

070

100

090

040

030

040

010

11735-007-10

11735-007-10

040501 Starter (Details) (E75NB3)

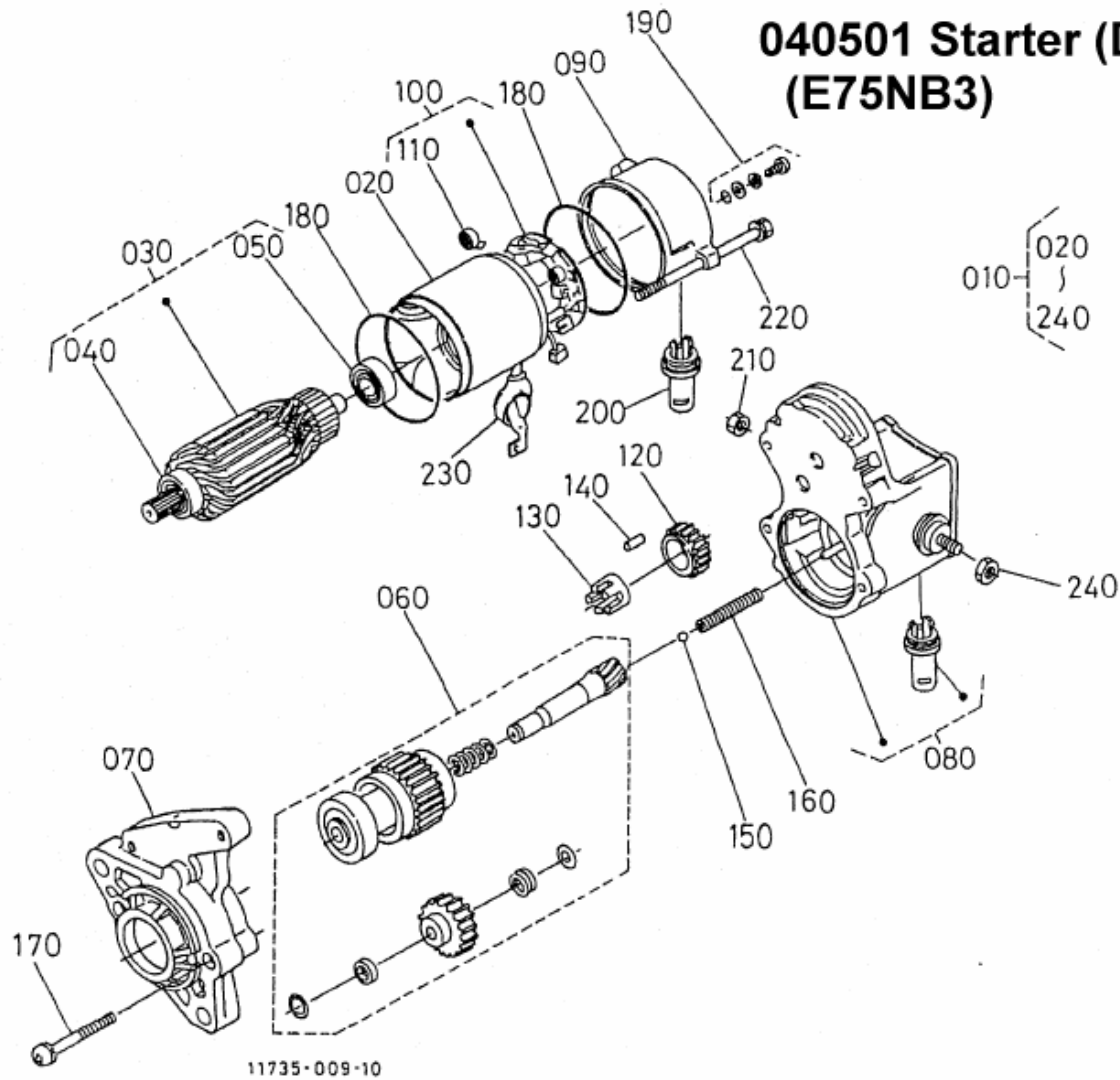


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
040501	010	14289-6301-0	Starter Assy		1		
040501	020	11197-6308-0	Yoke Assy		1		
040501	030	11197-6307-0	Armature Assy		1		
040501	040	11460-6350-0	Bearing		1		
040501	050	11460-6353-0	Bearing		1		
040501	060	16235-6304-0	Starter Kit		1		
040501	070	14289-6303-0	Housing Assy		1		
040501	080	14289-6302-0	Switch Assy, Magnetic		1		
040501	090	16661-6320-0	Frame, End		1		
040501	100	17381-6338-0	Brush Holder Assy		1		
040501	110	15401-6339-0	Brush Spring		4		
040501	120	11460-6327-0	Gear (2)		1		
040501	130	11460-6311-0	Retainer		1		
040501	140	19212-6310-0	Roller		5		
040501	150	19212-9713-0	Ball		1		
040501	160	11460-6312-0	Spring		1		
040501	170	11460-9331-0	Bolt		2		
040501	180	15511-9666-0	O Ring		2		
040501	190	15551-6376-0	Bolt Assy		2		
040501	200	16285-6357-0	Drain Pipe		1		
040501	210	13963-9201-0	Nut, Hexagon		1		
040501	220	11197-6332-0	Bolt		2		
040501	230	11173-6313-0	Cover, Terminal		1		
040501	240	16285-9201-0	Nut, Hexagon		1		

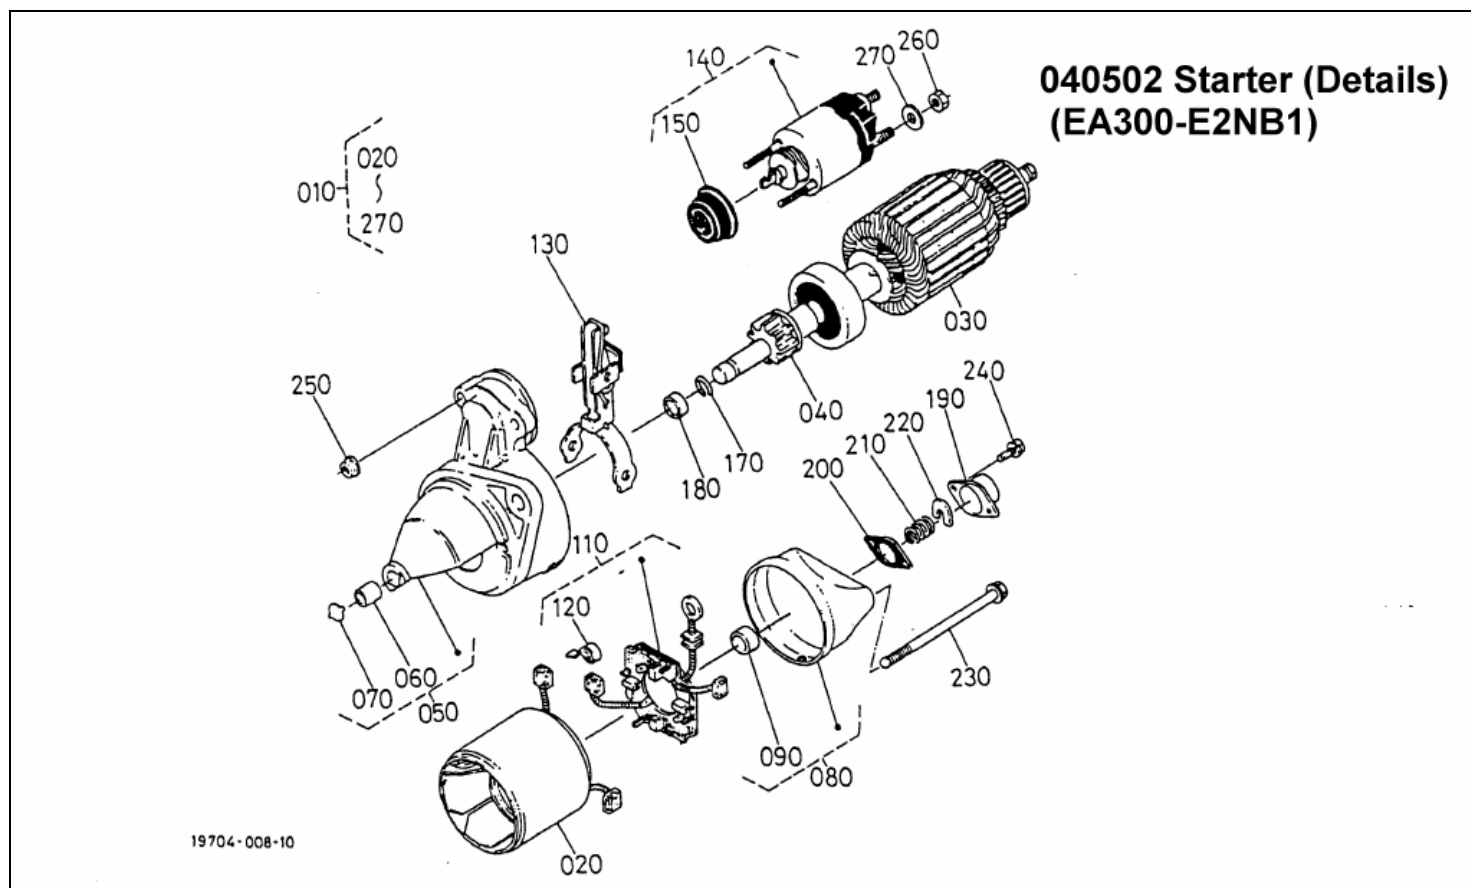


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
040502	010	14278-6301-1	Starter Assy			1	
040502	020	14278-6311-0	Starter Kit			1	
040502	030	14278-6307-0	Armature			1	
040502	040	14278-6304-0	Overrunning Clutch			1	
040502	050	14278-6303-0	Frame Assy			1	
040502	060	17016-6325-0	Bush			1	
040502	070	14278-9616-0	Expansion Plug			1	
040502	080	14278-6320-0	Frame End Assy			1	
040502	090	14278-6325-0	Bush			1	
040502	100						
040502	110	14278-6338-0	Brush Holder Assy			1	
040502	120	14278-6339-0	Brush Spring			4	
040502	130	14278-6305-0	Drive Lever			1	
040502	140	15231-6302-2	Magnetic Switch			1	
040502	150	14278-6345-0	Cover			1	
040502	160						
040502	170	15221-9482-0	Snap Poin			1	
040502	180	15321-6325-0	Nut, Pinion Stop			1	
040502	190	14278-6351-0	Cap, End Frame			1	
040502	200	14278-6352-0	Gasket			1	
040502	210	14278-6319-0	Brake Spring			1	
040502	220	14278-6318-0	Brake Shoe			1	
040502	230	14278-6332-0	Throttle Bolt			2	
040502	240	03024-50414	Screw with Washer			2	
040502	250	14278-9201-0	Nut			2	
040502	260	02112-50080	Nut			1	
040502	270	14278-9401-0	Plain Washer			1	

[illegible]

[illegible]

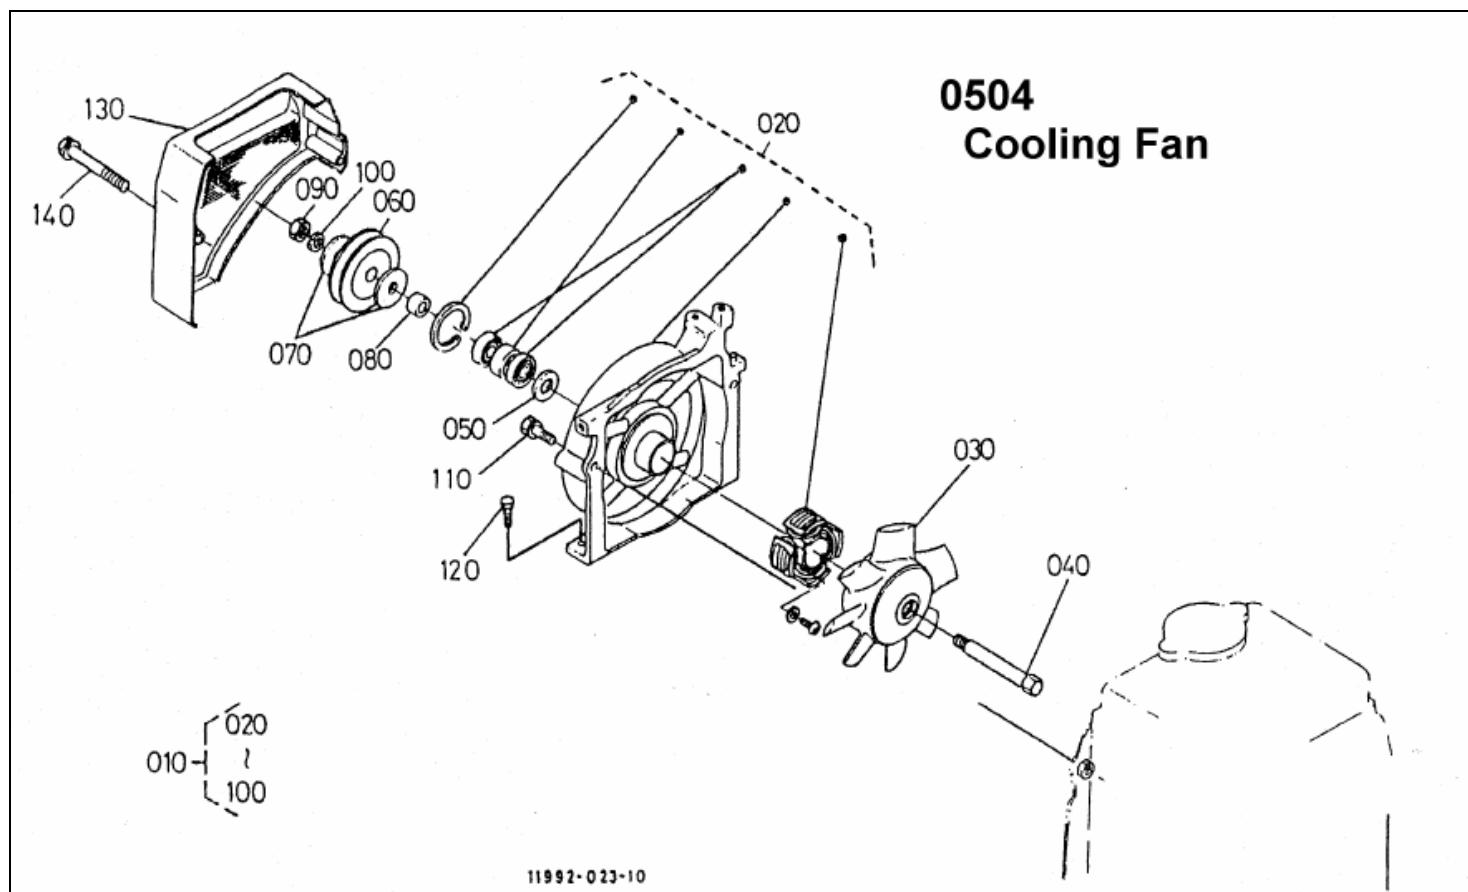


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0504	010	14983-7401-0	Fan Assy	1			
0504	010	14277-7401-0	Fan Assy		1		
0504	010	14279-7401-0	Fan Assy			1	
0504	020	14973-7410-0	Bracket Compl., Fan	1			
0504	020	14279-7410-0	Bracket Compl., Fan		1	1	
0504	030	14973-7411-0	Fan	1			
0504	030	14277-7411-0	Fan		1		
0504	030	14279-7411-0	Fan			1	
0504	040	14972-7414-0	Shaft, Fan	1	1	1	
0504	050	14972-7417-0	Washer 1, Fan	1	1	1	
0504	060	14982-7425-0	Pulley, Fan	1	1		
0504	060	14972-7425-0	Pulley, Fan			1	
0504	070	14972-7424-0	Washer 2, Fan	2	2	2	
0504	080	14972-7415-0	Collar, Fan	1	1	1	
0504	090	02112-50120	Nut	1	1	1	
0504	100	04512-60120	Spring Washer	1	1	1	
0504	110	01023-50616	Bolt	2	2	2	
0504	120	01023-50620	Bolt	2	2	2	
0504	130	14971-7412-0	Cover, Fan	1	1	1	
0504	140	01023-50660	Bolt	2	2		
0504	140	01053-50660	Bolt			2	
0504	150	04512-60060	Spring Washer			2	

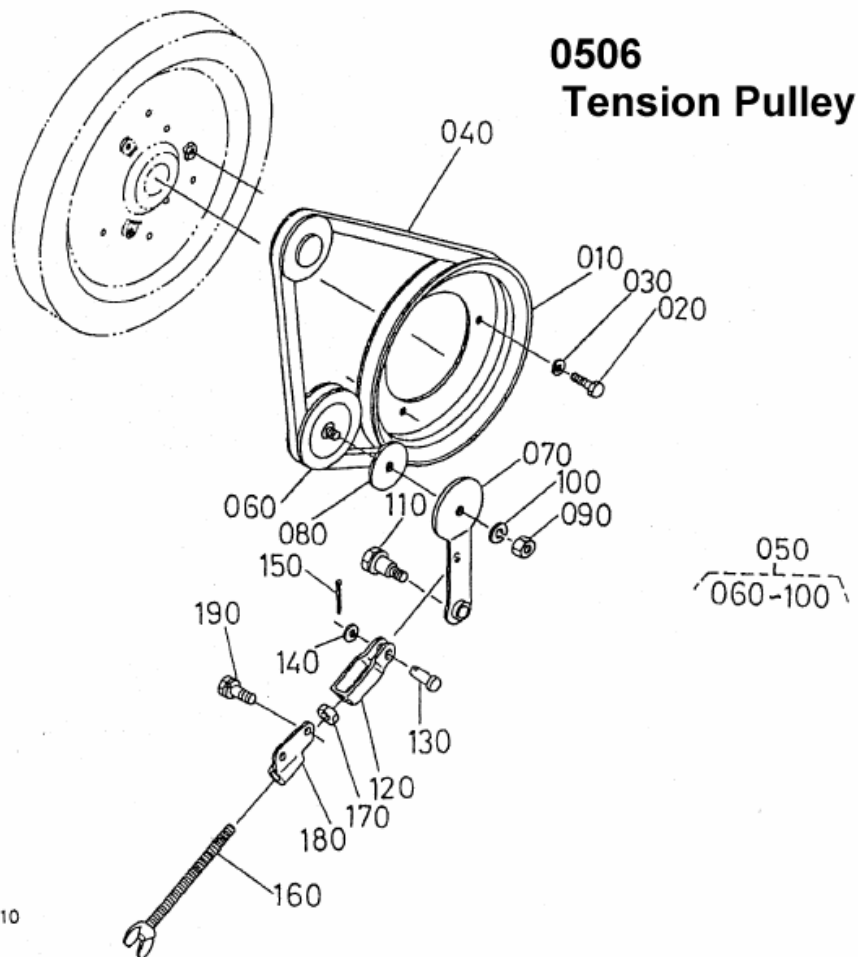


Fig. No.	Ref. No.	Part No.	Description	E75N	E75NB3	EA300	Remarks
0506	010	14971-7428-0	Pulley, Fan Drive	1	1	1	
0506	020	01053-50614	Bolt	3	3	3	
0506	030	04512-60060	Spring Washer	3	3	3	
0506	040	14971-9701-0	V-belt, FM32.5	1	1	1	
0506	050	14971-7430-0	Pulley Assy, Tension	1	1		Incl. 6-10
0506	050	14971-7430-2	Pulley Assy, Tension			1	
0506	060	14911-7432-0	Pulley, Tension	1	1		
0506	060	14541-7432-2	Pulley, Tension			1	
0506	070	14971-7441-0	Support, Pulley	1	1	1	
0506	080	14911-7477-0	Cap	1	1	1	
0506	090	02114-50080	Nut	1	1		
0506	090	02052-50080	Nut			1	
0506	100	04512-60080	Spring Washer	1	1	1	
0506	110	14971-9131-0	Bolt	1	1	1	
0506	120	14971-7436-0	Arm, Pulley	1	1		Sr. No., ~ 700683
0506	120	14971-7436-2	Arm, Pulley	1	1		Sr. No. 700684 ~
0506	120	14971-7436-2	Arm, Pulley			1	
0506	130	05112-50816	Pin	1	1		
0506	130	05122-50816	Pin			1	
0506	140	04012-50080	Washer	1	1	1	
0506	150	05511-50215	Split Pin	1	1	1	
0506	160	19701-7494-0	Bolt, Tension	1	1	1	
0506	170	02014-50060	Nut	1	1	1	
0506	180	14971-7495-0	Guide, Tension Bolt	1	1		Sr. No., ~ 700683
0506	180	14971-7495-2	Guide, Tension Bolt	1	1		Sr. No. 700684 ~
0506	180	14971-7495-2	Guide, Tension Bolt			1	
0506	190	01023-50612	Bolt	2	2	2	

0600

Valve & Rocker Arm

This exploded view diagram illustrates the assembly of a Valve & Rocker Arm. The main components are shown in their relative positions as they would be assembled. The parts are numbered as follows:

- 010: Rocker Arm
- 020: Rocker Arm Pin
- 030: Valve Spring
- 040: Valve Spring Retainer
- 050: Valve Spring Retainer Pin
- 060: Valve Spring Retainer Pin Washer
- 070: Valve Stem Seal
- 080: Valve Stem Seal O-Ring
- 090: Valve Stem Seal O-Ring
- 100: Valve Stem Pin
- 110: Valve Stem Pin Washer
- 120: Valve Stem Pin Nut
- 130: Valve Stem Pin Nut Washer
- 140: Valve Stem Pin Nut Washer
- 150: Valve Stem Pin Nut Washer

14296-003-10

Kubota PL2006

This exploded view diagram illustrates the assembly of a water pump. The central component is the pump housing (010), which features a series of vertical slots. Above the housing is the impeller (050) attached to a shaft (060). The impeller is secured with a nut (070) and a washer (090). A gasket (020) is positioned between the pump housing and the engine block (030). A bolt (040) is used to secure the pump housing to the engine block. A separate component (100) is shown with a bolt (110) and a washer (120).


[illegible]

[illegible]

 
0806 Bonnet

This diagram illustrates the assembly of the 0806 Bonnet. The main component is the bonnet (060), which features two circular cutouts. The assembly includes the following parts and fasteners:

- 040**: Two screws used to secure the bonnet to the base.
- 050**: A screw used to secure the bonnet to the base.
- 060**: The main bonnet component.
- 070**: A circular gasket or seal.
- 080**: A circular gasket or seal.
- 090**: A circular gasket or seal.
- 100**: A circular gasket or seal.
- 110**: A circular gasket or seal.
- 120**: A circular gasket or seal.
- 130**: A circular gasket or seal.
- 140**: A circular gasket or seal.
- 150**: A circular gasket or seal.
- 160**: A circular gasket or seal.
- 170**: A circular gasket or seal.
- 180**: A circular gasket or seal.
- 190**: A circular gasket or seal.
- 200**: A circular gasket or seal.
- 210**: A circular gasket or seal.
- 220**: A circular gasket or seal.
- 230**: A circular gasket or seal.
- 240**: A circular gasket or seal.
- 250**: A circular gasket or seal.
- 260**: A circular gasket or seal.
- 270**: A circular gasket or seal.
- 280**: A circular gasket or seal.
- 290**: A circular gasket or seal.
- 300**: A circular gasket or seal.
- 310**: A circular gasket or seal.
- 320**: A circular gasket or seal.
- 330**: A circular gasket or seal.
- 340**: A circular gasket or seal.
- 350**: A circular gasket or seal.
- 360**: A circular gasket or seal.
- 370**: A circular gasket or seal.
- 380**: A circular gasket or seal.
- 390**: A circular gasket or seal.
- 400**: A circular gasket or seal.
- 410**: A circular gasket or seal.
- 420**: A circular gasket or seal.
- 430**: A circular gasket or seal.
- 440**: A circular gasket or seal.
- 450**: A circular gasket or seal.
- 460**: A circular gasket or seal.
- 470**: A circular gasket or seal.
- 480**: A circular gasket or seal.
- 490**: A circular gasket or seal.
- 500**: A circular gasket or seal.
- 510**: A circular gasket or seal.
- 520**: A circular gasket or seal.
- 530**: A circular gasket or seal.
- 540**: A circular gasket or seal.
- 550**: A circular gasket or seal.
- 560**: A circular gasket or seal.
- 570**: A circular gasket or seal.
- 580**: A circular gasket or seal.
- 590**: A circular gasket or seal.
- 600**: A circular gasket or seal.
- 610**: A circular gasket or seal.
- 620**: A circular gasket or seal.
- 630**: A circular gasket or seal.
- 640**: A circular gasket or seal.
- 650**: A circular gasket or seal.
- 660**: A circular gasket or seal.
- 670**: A circular gasket or seal.
- 680**: A circular gasket or seal.
- 690**: A circular gasket or seal.
- 700**: A circular gasket or seal.
- 710**: A circular gasket or seal.
- 720**: A circular gasket or seal.
- 730**: A circular gasket or seal.
- 740**: A circular gasket or seal.
- 750**: A circular gasket or seal.
- 760**: A circular gasket or seal.
- 770**: A circular gasket or seal.
- 780**: A circular gasket or seal.
- 790**: A circular gasket or seal.
- 800**: A circular gasket or seal.
- 810**: A circular gasket or seal.
- 820**: A circular gasket or seal.
- 830**: A circular gasket or seal.
- 840**: A circular gasket or seal.
- 850**: A circular gasket or seal.
- 860**: A circular gasket or seal.
- 870**: A circular gasket or seal.
- 880**: A circular gasket or seal.
- 890**: A circular gasket or seal.
- 900**: A circular gasket or seal.
- 910**: A circular gasket or seal.
- 920**: A circular gasket or seal.
- 930**: A circular gasket or seal.
- 940**: A circular gasket or seal.
- 950**: A circular gasket or seal.
- 960**: A circular gasket or seal.
- 970**: A circular gasket or seal.
- 980**: A circular gasket or seal.
- 990**: A circular gasket or seal.

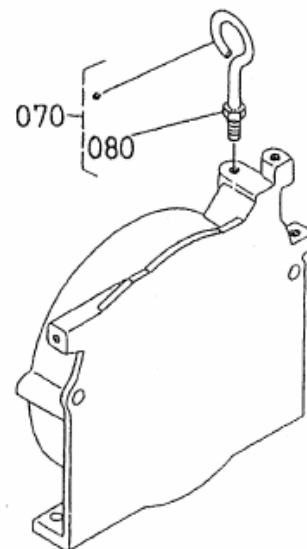[illegible]

(E75N)
(E75NB3)

Kubota PL2006

040

Kubota PL2006

Part Number Index

Part No.	Fig. No.	Ref. No.	Description
01023-50612	0004	160	Bolt
01023-50612	0005	100	Bolt
01023-50612	0506	190	Bolt
01023-50612	0805	030	Bolt
01023-50614	0005	180	Bolt
01023-50614	010301	060	Bolt
01023-50614	010302	070	Bolt
01023-50614	0204	050	Bolt
01023-50614	030401	070	Bolt
01023-50616	0101	080	Bolt
01023-50616	0101	150	Bolt
01023-50616	0202	030	Bolt
01023-50616	0502	140	Bolt
01023-50616	0504	110	Bolt
01023-50616	0805	060	Bolt
01023-50616	0806	040	Bolt
01023-50618	030401	090	Bolt
01023-50618	040402	030	Bolt
01023-50620	040401	040	Bolt
01023-50620	0502	100	Bolt
01023-50620	0504	120	Bolt
01023-50622	0202	100	Bolt
01023-50622	030403	110	Bolt
01023-50622	040401	050	Bolt
01023-50622	0603	130	Bolt
01023-50622	0806	050	Bolt
01023-50625	0001	140	Bolt
01023-50632	0603	140	Bolt
01023-50635	0001	130	Bolt
01023-50635	0004	060	Bolt
01023-50660	0504	140	Bolt
01023-50665	0004	070	Bolt
01023-50680	0004	080	Bolt
01053-50512	0102	150	Bolt
01053-50608	0605	080	Bolt
01053-50608	0605	110	Bolt
01053-50614	0102	190	Bolt
01053-50614	0106	090	Bolt
01053-50614	0506	020	Bolt
01053-50660	0504	140	Bolt
01055-50625	0205	030	Bolt
01055-50630	0205	040	Bolt
01123-50485	030003	190	Bolt
01123-50820	030403	070	Bolt
01123-50845	030001	180	Bolt
01123-50845	030002	190	Bolt
01123-50845	030403	090	Bolt
01133-51030	040402	040	Bolt
01155-50630	0205	040	Bolt
01202-50612	0805	080	Bolt
01222-50608	0200	080	Bolt
01513-50816	0605	030	Stud
01518-50616	0502	040	Stud
01518-50620	0100	060	Stud
01754-50612	0004	260	Flange Bolt
01754-50614	0202	130	Flange Bolt
01754-50618	0502	090	Bolt
01754-50620	0001	180	Flange Bolt
01754-50620	0100	050	Flange Bolt
01754-50625	0001	150	Flange Bolt
01754-50630	030402	100	Flange Bolt
01754-50820	030402	060	Flange Bolt

Part No.	Fig. No.	Ref. No.	Description
01754-50830	030402	120	Flange Bolt
01754-50855	030402	080	Flange Bolt
01774-51030	040401	030	Flange Bolt
01820-50635	0502	120	Knob Bolt
02012-60060	0200	130	Nut
02014-50060	0005	140	Nut
02014-50060	0205	050	Nut
02014-50060	0502	050	Nut
02014-50060	0506	170	Nut
02052-50080	0506	090	Nut
02054-50040	0004	110	Nut
02056-50050	0005	080	Nut
02056-50060	0100	070	Nut
02056-50060	0200	140	Nut
02112-50080	040502	260	Nut
02112-50120	0504	090	Nut
02114-50080	040401	080	Nut
02114-50080	0506	090	Nut
02114-50080	0605	040	Nut
02114-50080	0806	080	Nut
02114-50080	080801	020	Nut
02116-50080	0202	170	Nut
02761-50040	040601	050	Flange Nut
02761-50040	0800	020	Flange Nut
03004-50612	080802	070	Screw with Washer
03024-50408	0004	100	Screw
03024-50414	040502	240	Screw with Washer
03024-50510	0004	120	Screw
03024-50514	0204	100	Screw
03410-50606	0600	090	Screw
04012-50060	0204	030	Washer
04012-50080	0200	160	Washer
04012-50080	0202	160	Washer
04012-50080	040401	070	Washer
04012-50080	0506	140	Washer
04013-60040	040601	060	Washer
04013-60040	0800	030	Washer
04013-60060	0200	150	Washer
04013-60060	080802	050	Plain Washer
04013-60080	030403	080	Plain Washer
04512-50060	0502	060	Spring Washer
04512-60060	0005	150	Spring Washer
04512-60060	0100	080	Spring Washer
04512-60060	0102	200	Spring Washer
04512-60060	0106	100	Spring Washer
04512-60060	0504	150	Spring Washer
04512-60060	0506	030	Spring Washer
04512-60060	0605	090	Spring Washer
04512-60060	0605	120	Spring Washer
04512-60080	040401	090	Spring Washer
04512-60080	0506	100	Spring Washer
04512-60120	0504	100	Spring Washer
04611-00500	0100	100	Circlip
04612-00160	0101	220	Circlip
04724-00100	0204	120	Packing
04724-00100	040601	030	Packing
04724-00100	040602	030	Gasket
04724-00160	0004	300	Packing
04811-00070	0200	110	O Ring
04811-00080	0001	080	O Ring
04811-11050	0100	040	O Ring
04811-40140	0006	020	O Ring

Part No.	Fig. No.	Ref. No.	Description
04811-50300	0004	220	O Ring
05012-00612	0001	040	Parallel Pin
05012-00614	040401	060	Parallel Pin
05012-00614	040402	050	Straight Pin
05112-50816	0506	130	Pin
05122-50816	0506	130	Pin
05411-00412	0001	050	Spring Pin
05411-00612	0003	040	Spring Pin
05511-50215	0506	150	Split Pin
05712-00510	0101	210	Feather Key
05712-00515	0102	170	Feather Key
05712-00518	0106	070	Feather Key
05712-00750	080801	080	Feather Key
06311-75022	0003	020	Plug, Expansion
06631-35010	0204	110	Plug
07012-11012	080801	050	10-12 Spanner
07012-11012	080802	030	Spanner
07012-11417	080801	060	14-17 Snapper
07012-11417	080802	040	Spanner
07715-00201	0204	080	Ball
07715-01607	0004	270	Steel Ball
07715-03205	0204	150	Ball
09318-88085	0004	320	Cord Clamp
09550-25357	0101	190	Seal, Oil
09664-50300	0004	310	Fuel Pipe
11059-3227-0	0006	020	O Ring
11131-4287-0	0202	050	Pipe Assy 1, Jet Start
11131-7203-0	0502	020	Cap, Radiator
11131-8724-0	0502	025	Label, Caution
11131-8741-0	0809	060	Decal, Fuel Filter
11151-4126-0	030401	020	Cap, Fuel Tank
11151-4135-0	030401	050	Filter
11151-5789-0	0205	010	Nut
11151-6220-0	0101	160	Starting Shaft Compl.
11151-7738-0	030402	130	Washer
11151-8601-0	080801	030	Tool Assy
11151-8601-0	080802	010	Tool Assy
11151-8706-0	080901	042	Decal, Caution
11151-8706-0	080902	030	Decal, Caution
11151-8719-0	0806	030	Decal
11151-8719-0	080902	050	Decal, Corporate Symbol
11151-8719-0	0809	040	Decal, Corporate Symbol
11151-8721-0	080901	020	Decal, Caution
11151-8721-0	080902	020	Decal, Caution
11151-8722-0	080901	045	Decal, Caution
11151-8722-0	080902	045	Decal, Caution
11151-8741-0	080901	050	Decal, Caution
11151-8741-0	080902	070	Decal, Caution
11173-6313-0	040501	230	Cover, Terminal
11197-6307-0	040501	030	Armature Assy
11197-6308-0	040501	020	Yoke Assy
11197-6332-0	040501	220	Bolt
11420-0501-2	0004	090	Breather Assy
11420-3543-0	0004	240	Cover, Oil Pump
11420-3691-0	0004	290	Plug
11420-6461-0	0001	170	Regulator Stay
11460-6311-0	040501	130	Retainer
11460-6312-0	040501	160	Spring
11460-6327-0	040501	120	Gear (2)
11460-6350-0	040501	040	Bearing
11460-6353-0	040501	050	Bearing
11460-9331-0	040501	170	Bolt

Part No.	Fig. No.	Ref. No.	Description
11521-3901-0	040601	010	Oil Switch
11521-3901-0	040602	010	Oil Switch
11924-1247-0	0605	070	Cover, Muffler Pipe
11924-1247-0	0605	070	Cover, Muffler Pipe
11982-6122-0	0805	070	Holder, Starting Handle
11992-5704-0	0200	070	Speed Control Lever Assy
12521-4103-0	030401	020	Cap, Fuel Tank
12521-4103-0	030402	020	Cap, Fuel Tank
12521-4134-0	030401	060	Packing
12521-4134-0	030402	025	Packing
12521-4134-0	030403	050	Fuel Tank Cap Assy
12521-4134-0	030403	060	Gasket, Tank Cap
12545-4135-0	030403	040	Filter, Fuel Tank
13963-9201-0	040501	210	Nut, Hexagon
14107-5134-0	0203	100	Packing
14107-6227-0	0101	180	Pin, Starting Shaft
14109-5130-0	0203	150	Shim Plate
14111-4241-0	030001	050	Joint
14111-4241-0	030002	050	Joint
14111-4241-0	030003	050	Eye Joint
14261-4135-0	030401	050	Filter
14261-4135-0	030402	050	Filter
14274-7206-0	0502	010	Radiator Assy
14277-7401-0	0504	010	Fan Assy
14277-7411-0	0504	030	Fan
14278-6301-0	040402	010	Starter Assy
14278-6301-1	040502	010	Starter Assy
14278-6303-0	040502	050	Frame Assy
14278-6304-0	040502	040	Overrunning Clutch
14278-6305-0	040502	130	Drive Lever
14278-6307-0	040502	030	Armature
14278-6311-0	040502	020	Starter Kit
14278-6318-0	040502	220	Brake Shoe
14278-6319-0	040502	210	Brake Spring
14278-6320-0	040502	080	Frame End Assy
14278-6325-0	040502	090	Bush
14278-6332-0	040502	230	Throttle Bolt
14278-6338-0	040502	110	Brush Holder Assy
14278-6339-0	040502	120	Brush Spring
14278-6345-0	040502	150	Cover
14278-6351-0	040502	190	Cap, End Frame
14278-6352-0	040502	200	Gasket
14278-6389-3	040402	020	Support, Starter
14278-9201-0	040502	250	Nut
14278-9401-0	040502	270	Plain Washer
14278-9616-0	040502	070	Expansion Plug
14279-0174-0	030402	110	Hook
14279-0300-0	0003	010	Cylinder Head Assy
14279-0300-5	0003	010	Cylinder Head Assy
14279-4101-0	030402	010	Fuel Tank Assy
14279-4101-8	030402	010	Fuel Tank Assy
14279-4113-2	030403	100	Support, Fuel Tank
14279-4171-0	030402	030	Gauge, Fuel
14279-4171-0	030403	020	Fuel Gauge
14279-4201-0	030002	010	Pipe Assy (1), Fuel
14279-4201-0	030003	010	Fuel Pipe Assy
14279-4220-0	030002	060	Pipe Assy (1) Air Vent.
14279-4220-0	030003	060	Air Vent Pipe Assy
14279-4250-0	0206001	010	Pipe Assy, Overflow
14279-4250-0	030003	080	Overflow Pipe Assy
14279-7221-0	0502	130	Radiator Cover
14279-7401-0	0504	010	Fan Assy

Part No.	Fig. No.	Ref. No.	Description
14279-7410-0	0504	020	Bracket Compl., Fan
14279-7411-0	0504	030	Fan
14279-8736-0	080902	080	Decal, Engine Hook
14286-0231-0	0001	090	Cylinder Liner
14286-2105-0	0102	020	Ring Assy
14286-2111-0	0102	010	Piston
14289-0480-0	0805	010	Side Cover Compl.
14289-2337-0	010302	050	Washer, Flywheel
14289-2501-0	010302	010	Flywheel Compl.
14289-2533-0	010302	060	Cover 1, Flywheel
14289-4113-0	030402	090	Support, Fuel Tank
14289-4137-0	030402	070	Washer
14289-6301-0	040401	010	Starter Assy
14289-6301-0	040501	010	Starter Assy
14289-6302-0	040501	080	Switch Assy, Magnetic
14289-6303-0	040501	070	Housing Assy
14289-6389-0	040401	020	Support, Starter Assy
14289-8711-0	080902	010	Name Plate, Engine
14289-8755-0	0805	020	Sticker
14301-3363-0	0001	030	Pin Plug
14301-3363-0	0004	020	Pin Plug
14301-3395-0	0001	070	Pipe Pin
14301-4236-0	030401	040	Clip
14301-4236-0	030402	040	Clip
14301-4236-0	030403	030	Clip
14301-4357-0	030001	130	O Ring, Filter
14301-4357-0	030002	130	O Ring, Filter
14301-4357-0	030003	130	O Ring, Filter
14301-4359-0	030001	160	Retaining Ring
14301-4359-0	030002	170	Retaining Ring
14301-4359-0	030003	170	Retaining Ring
14301-4365-0	030001	170	O Ring, Filter Cup
14301-4365-0	030002	180	O Ring, Filter Cup
14301-4365-0	030003	180	O Ring, Filter Cup
14301-5415-0	0200	040	Packing
14301-5422-0	0200	030	Cap Nut
14301-5425-0	0200	020	Lock Nut
14301-5442-0	0200	050	Cap
14301-6631-0	0005	110	Lever Compl. Decom.
14301-9137-0	080801	040	Box Spanner
14301-9137-0	080802	020	Box Spanner
14351-4250-0	0206001	010	Pipe Assy, Overflow
14416-6505-0	0001	190	Wire Harness Assy #1
14416-6505-0	080802	060	Wire Harness Assy
14417-0480-0	0805	010	Side Cover Compl.
14418-0101-0	0001	010	Crankcase Compl.
14418-0480-2	0805	010	Side Cover Compl.
14418-1161-0	0603	110	Flange, Air Cleaner
14418-8711-0	080901	010	Name Plate, Engine
14418-8755-0	0805	020	Sticker
14418-8912-0	080901	100	Instruction Manual, E75
14418-8912-0	080901	100	Instruction Manual, E75
14418-8912-0	080902	100	Instruction Manual, E75
14418-8912-0	080902	100	Instruction Manual, E75
14428-6460-0	0001	160	Regulator Assy
14431-1243-0	0605	060	Band, Pipe
14431-6071-0	080901	040	Decal, Jet Start
14431-6071-0	080902	040	Decal, Jet Start
14461-6506-0	040601	040	Wire Harness Assy #2
14541-2335-0	010302	040	Nut, Flywheel
14541-4290-2	0202	010	Jet Start Assy
14541-7432-2	0506	060	Pulley, Tension

Part No.	Fig. No.	Ref. No.	Description
14541-9685-0	0100	020	Plug
14595-0331-0	0003	100	Gasket, Head
14595-0413-0	0004	050	Packing, Gear Case
14595-0472-0	0001	120	Packing, Crankcase Cover
14595-0543-0	0004	130	Packing, Breather
14595-1223-0	0605	020	Packing
14595-7245-0	0502	080	Packing, Radiator Base
14611-3609-0	040601	010	Oil Signal
14611-5120-0	0203	080	O Ring
14642-0101-0	0001	010	Crankcase Compl.
14642-5111-2	0805	040	Starting Handle
14652-2511-0	010301	010	Flywheel
14658-5654-3	0200	060	Stop Spring
14658-5654-3	0200	060	Stop Spring
14658-5751-0	080802	080	Spring
14658-6071-0	080901	080	Decal, Caution on Starting
14658-6071-0	080902	060	Decal, Caution on Starting
14658-6071-2	080901	080	Decal, Caution on Starting
14658-6071-2	080902	060	Decal, Caution on Starting
14681-8721-0	080901	045	Decal, Caution
14799-8822-0	0809	050	Decal, Caution
14911-1146-0	0603	050	Bolt
14911-1153-0	0603	090	Wing Nut
14911-1192-0	0603	080	Grommet
14911-1241-2	0605	050	Pipe, Muffler
14911-1247-0	0605	070	Cover, Muffler Pipe
14911-2629-0	0106	030	Bearing 2, Balancer
14911-3211-0	0006	010	Filter, Oil
14911-3540-0	0004	230	Rotor Assy, Oil Pump
14911-3545-0	0004	250	O Ring
14911-3545-0	0100	030	O Ring
14911-3695-0	0004	280	Spring
14911-4275-0	030001	020	Clip, Pipe
14911-4275-0	030001	040	Clip, Pipe
14911-4275-0	030002	020	Clip, Pipe
14911-4275-0	030002	040	Clip, Pipe
14911-4275-0	030003	020	Pipe Clip
14911-4301-4	030001	100	Filter Assy, Fuel
14911-4301-4	030002	100	Filter Assy, Fuel
14911-4301-4	030003	100	Fuel Filter Assy
14911-4351-3	030001	110	Body Compl. Fuel Filter
14911-4351-3	030002	110	Body Compl. Fuel Filter
14911-4351-3	030003	110	Filter Body Compl.
14911-5105-0	0203	030	Pump Element
14911-5106-0	0203	020	Control Rack
14911-5132-0	0203	090	Screw
14911-5143-0	0203	180	Clamp Pin
14911-5528-0	0204	020	Pin, Governor Weight
14911-5531-0	0204	060	Shaft, Governor
14911-5648-0	0204	140	Spring, Idling
14911-6754-0	0202	040	Cord Clamp
14911-7432-0	0506	060	Pulley, Tension
14911-7477-0	0506	080	Cap
14911-8721-0	080901	020	Decal, Caution
14911-9493-0	0001	060	Pipe Pin
14911-9685-0	0003	030	Plug, Blind
14913-5766-0	0202	140	Throttle Wire Holder Assy
14913-5767-0	0202	150	Throttle Wire Holder
14926-4301-6	030001	100	Filter Assy, Fuel
14926-4301-6	030002	100	Filter Assy, Fuel
14941-2324-0	0102	100	Plug
14941-5361-0	0207001	100	Nozzle Piece

Part No.	Fig. No.	Ref. No.	Description
14952-4250-0	0202	050	Pipe Assy 2, Fuel Over Flow
14971-0178-0	080801	010	Engine Hook Assy
14971-0231-0	0001	090	Cylinder Liner
14971-0235-0	0001	100	O Ring
14971-0300-0	0003	010	Cylinder Head Assy
14971-0341-0	0003	070	Stud, Head
14971-0341-2	0003	070	Stud, Head
14971-0341-2	0003	070	Stud, Head
14971-0402-0	0004	010	Gear Case Compl.
14971-0402-2	0004	010	Gear Case Compl.
14971-0402-3	0004	010	Gear Case Compl.
14971-0471-0	0001	110	Crankcase Cover
14971-0501-2	0004	090	Breather Assy
14971-0537-0	0004	150	Oil Guard, Breather
14971-0538-0	0004	200	Oil Guard (2), Breather
14971-0547-0	0004	140	Inner Plate, Breather
14971-0555-0	0004	040	Joint, Breather Pipe
14971-0555-2	0004	040	Joint, Breather Pipe
14971-0555-2	0004	040	Joint, Breather Pipe
14971-1101-0	0603	010	Air Cleaner Assy
14971-1101-2	0603	010	Air Cleaner Assy
14971-1101-2	0603	010	Air Cleaner Assy
14971-1105-0	0603	030	Body Compl.
14971-1110-0	0603	070	Case Compl.
14971-1117-0	0603	060	Gasket
14971-1118-0	0603	020	Element, Air Cleaner
14971-1152-0	0603	040	O Ring
14971-1161-4	0603	110	Flange, Air Cleaner
14971-1165-0	0603	120	Packing, Flange
14971-1211-2	0605	010	Muffler
14971-1272-0	0605	100	Flange Cover 1, Muffler
14971-1405-0	0600	070	Bracket Compl. Rocker Arm
14971-1406-0	0600	080	Shaft Compl., Rocker Arm
14971-1451-0	0005	010	Head Cover
14971-1451-2	0005	010	Head Cover
14971-1451-2	0005	010	Head Cover
14971-1452-0	0005	020	Packing, Head Cover
14971-1511-0	0101	020	Push Rod
14971-1601-0	0101	030	Cam Shaft Assy
14971-1615-0	0101	040	Cam Shaft
14971-1627-0	0101	070	Stopper, Cam Shaft
14971-1651-0	0101	050	Cam Gear
14971-2301-2	0102	090	Crankshaft Compl.
14971-2336-0	010301	030	Nut, Crank Shaft
14971-2336-0	010302	040	Nut, Flywheel
14971-2337-0	010301	040	Washer, Flywheel
14971-2337-0	010302	050	Washer, Flywheel
14971-2337-2	010301	040	Washer, Flywheel
14971-2337-2	010302	050	Washer, Flywheel
14971-2345-0	0102	120	Main Bearng (1)
14971-2346-0	0102	130	Main Bearing (2)
14971-2355-0	0100	090	Seal, Oil
14971-2359-0	0102	140	Stopper, Bearing
14971-2401-0	0101	090	Idle Gear Compl.
14971-2411-0	0102	160	Crank Gear
14971-2425-0	0101	140	Shaft, Idle Gear
14971-2625-0	0106	010	Balancer
14971-2628-0	0106	020	Bearing 1, Balancer
14971-2644-0	0106	040	Gear 1, Balancer
14971-2645-0	0106	050	Gear 2, Balancer
14971-2646-0	0106	060	Gear 3, Balancer
14971-2671-0	0001	020	Seal Plug

Part No.	Fig. No.	Ref. No.	Description
14971-2681-0	0102	180	Retainer, Bearing
14971-2681-0	0106	080	Bearing Retainer
14971-3575-0	0100	110	Ring, Filter
14971-3577-0	0100	120	O Ring
14971-3611-0	040601	020	Holder, Oil Signal
14971-3611-2	040601	020	Holder, Oil Signal
14971-3611-2	040602	020	Holder, Oil Signal
14971-3641-0	0007	10	Gauge, Oil
14971-4101-0	030401	010	Fuel Tank Assy
14971-4171-0	030401	030	Gauge, Fuel
14971-4201-0	030001	010	Pipe Assy (1), Fuel
14971-4202-0	030001	030	Pipe Assy (2), Fuel
14971-4202-0	030002	030	Pipe Assy (2), Fuel
14971-4202-0	030003	030	Fuel Pipe Assy
14971-4205-0	030001	060	Pipe Assy (1) Air Vent.
14971-4220-0	030001	080	Pipe Assy (2), Air Vent.
14971-4275-0	0202	060	Clip, Pipe
14971-4275-0	0206001	020	Pipe Clip
14971-4275-0	030001	070	Clip, Pipe
14971-4275-0	030001	090	Clip, Pipe
14971-4275-0	030002	070	Clip, Pipe
14971-4275-0	030003	070	Pipe Clip
14971-4275-0	030003	090	Pipe Clip
14971-4292-0	0202	020	Holder, Jet Start
14971-4292-2	0202	020	Holder, Jet Start
14971-4292-2	0202	020	Jet Start Holder
14971-5101-0	0202	090	Injection Pump Assy
14971-5101-0	0203	010	Injection Pump Assy
14971-5101-2	0202	090	Injection Pump Assy
14971-5101-2	0203	010	Injection Pump Assy
14971-5211-0	0202	070	Shim, Pump Adjust
14971-5212-0	0202	080	Shim 2, Pump Adjust
14971-5300-0	0206001	030	Nozzle Holder Assy
14971-5300-0	0207001	010	Nozzle Holder Assy
14971-5371-0	0202	110	Injection Pipe
14971-5371-3	0202	110	Injection Pipe
14971-5385-0	0202	120	Clip, Pipe
14971-5385-2	0202	120	Clamp, Pipe
14971-5385-2	0202	120	Clamp, Pipe
14971-5402-0	0200	010	Limiter Assy, Fuel
14971-5417-0	0200	013	Pin, Fuel Limiter
14971-5423-0	0200	015	Spring
14971-5604-0	0204	070	Lever Compl., Governor
14971-5614-0	0204	090	Shaft, Governor Lever
14971-5654-0	0200	060	Stop Spring
14971-5723-0	0200	090	Shaft Compl., Speed Control
14971-6128-2	0805	050	Support, Starting Handle
14971-6128-4	0805	050	Support, Starting Handle
14971-6212-0	0101	200	Gear, Starting
14971-6621-0	0005	130	Spring, Decompression
14971-6629-0	0004	030	Pin, Idle Spring
14971-6632-0	0005	060	Shaft, Decompression
14971-6655-0	0005	090	Stopper, Decomp. Shaft
14971-6655-2	0005	090	Stopper, Decomp. Shaft
14971-6655-2	0005	090	Stopper, Decomp. Shaft
14971-7206-0	0502	010	Radiator Assy
14971-7212-0	0502	030	Packing, Radiator
14971-7214-0	0502	070	Base, Radiator
14971-7225-0	0502	110	Net, Radiator
14971-7227-0	0806	060	Cap
14971-7412-0	0504	130	Cover, Fan
14971-7428-0	0506	010	Pulley, Fan Drive

Part No.	Fig. No.	Ref. No.	Description
14971-7430-0	0506	050	Pulley Assy, Tension
14971-7430-2	0506	050	Pulley Assy, Tension
14971-7436-0	0506	120	Arm, Pulley
14971-7436-2	0506	120	Arm, Pulley
14971-7436-2	0506	120	Arm, Pulley
14971-7441-0	0506	070	Support, Pulley
14971-7495-0	0506	180	Guide, Tension Bolt
14971-7495-2	0506	180	Guide, Tension Bolt
14971-7495-2	0506	180	Guide, Tension Bolt
14971-8845-0	0603	100	Label
14971-9131-0	0506	110	Bolt
14971-9501-2	010301	020	Feather Key
14971-9501-2	010302	030	Feather Key
14971-9701-0	0506	040	V-belt, FM32.5
14972-0178-0	0806	070	Engine Hook Assy
14972-0178-0	080802	090	Engine Hook Bolt Assy
14972-1311-0	0600	010	Valve, Inlet
14972-1312-0	0600	020	Valve, Exhaust
14972-2533-6	010301	050	Cover 1, Flywheel
14972-7414-0	0504	040	Shaft, Fan
14972-7415-0	0504	080	Collar, Fan
14972-7417-0	0504	050	Washer 1, Fan
14972-7424-0	0504	070	Washer 2, Fan
14972-7425-0	0504	060	Pulley, Fan
14972-7711-0	0806	020	Bonnet
14972-8717-0	080901	070	Decal, KUBOTA
14972-8911-2	080901	090	Instruction Manual, E70
14972-8911-2	080902	090	Instruction Manual, E70
14972-8911-4	080901	090	Instruction Manual, E70
14972-8911-4	080902	090	Instruction Manual, E70
14973-4113-0	030401	080	Support, Fuel Tank
14973-7410-0	0504	020	Bracket Compl., Fan
14973-7411-0	0504	030	Fan
14973-7701-2	0806	010	Bonnet Assy
14981-0404-0	0100	010	Main Bearing Case Assy
14981-0404-2	0100	010	Main Bearing Case Assy
14981-0404-2	0100	010	Main Bearing Case Assy
14981-2301-2	0102	090	Crank Shaft Compl.
14981-2346-0	0102	130	Main Bearing (2)
14981-2346-0	0102	130	Main Bearing 2
14981-2390-2	0102	210	Crankshaft Service Assy
14981-2390-3	0102	210	Crankshaft Service Assy
14981-5641-0	0204	130	Spring, Governor
14981-9143-0	0102	110	Bolt
14982-5402-0	0200	010	Limiter Assy, Fuel
14982-7425-0	0504	060	Pulley, Fan
14983-7401-0	0504	010	Fan Assy
14984-6382-0	010302	020	Ring Gear
15109-3366-0	0200	040	Packing
15109-3366-0	0200	040	Packing
15221-5103-0	0203	040	Valve, Delivery
15221-5107-0	0203	160	Tappet Assy
15221-5123-0	0203	060	Spring, Delivery Valve
15221-5124-0	0203	070	Gasket, Delivery Valve
15221-5125-0	0203	170	Pin, Tappet Guide
15221-5127-0	0203	120	Spring Seat, Upper
15221-5128-0	0203	130	Plunger Spring
15221-5129-0	0203	140	Spring Seat, Lower
15221-5138-2	0203	110	Control Sleeve
15221-5316-0	0207001	080	Push Rod
15221-5317-0	0207001	060	Spring, Nozzle
15221-5323-0	0207001	050	Washer, Adjuster

Part No.	Fig. No.	Ref. No.	Description
15221-5328-0	0207001	090	Nozzle Nut
15221-5335-0	0207001	070	Distance Piece
15221-9202-0	0207001	020	Nut
15221-9402-0	0207001	040	Washer
15221-9482-0	040502	170	Snap Poin
15221-9568-0	0207001	030	Joint
15231-4356-0	030001	120	Element Assy
15231-4356-0	030002	120	Element Assy
15231-4356-0	030003	120	Element Assy
15231-6302-2	040502	140	Magnetic Switch
15241-6758-0	0001	200	Cable Clamp
15241-6758-0	0004	170	Cable Clamp
15261-1324-0	0600	030	Spring, Valve
15261-1336-0	0600	050	Collet, Spring
15261-1423-2	0600	140	Screw, Adjuster
15261-1424-0	0600	150	Nut
15261-1441-0	0600	100	Stud
15261-1462-0	0005	030	Nut, Head Cover
15261-1463-0	0005	050	Packing, Head Cover
15261-1464-0	0005	040	Washer, Head Cover
15261-2131-0	0102	030	Pin, Piston
15261-2133-0	0102	040	Circlip, Piston Pin
15261-2198-0	0102	060	Bush, Piston Pin
15261-2432-0	0101	130	Circlip, Idle Gear
15261-2436-0	0101	110	Collar 1, Idle Gear
15261-2437-0	0101	120	Collar 2, Idle Gear
15261-2498-0	0101	100	Bush, Idle Gear
15261-5422-0	0200	030	Cap Nut
15261-5422-0	0200	030	Cap Nut
15261-5437-0	0200	020	Lock Nut
15261-6635-0	0005	070	Bolt, Decompression
15261-6663-0	0005	160	Cover
15261-9201-0	0600	110	Nut
15261-9401-0	0600	120	Washer
15261-9501-0	0200	100	Feather Key
15263-5738-0	0200	120	Friction Plate
15263-6664-0	0005	170	Packing, Cover
15271-1403-0	0600	130	Rocker Arm Assy
15271-1624-0	0101	060	Feather Key
15271-5122-0	0203	050	Holder, Delivery Valve
15272-6757-0	0001	190	Cord Clamp
15272-6757-0	0004	190	Cable Clamp
15272-6757-0	030003	200	Cord Clamp
15321-6325-0	040502	180	Nut, Pinion Stop
15381-2214-0	0102	070	Connecting Rod Bolt
15393-4310-0	030001	140	Cup Compl. Fuel Filter
15393-4310-0	030002	140	Cup Compl. Fuel Filter
15393-4310-0	030003	140	Filter Cup Assy
15393-4358-0	030001	190	Cup, Fuel Filter
15393-4358-0	030002	150	Cup, Fuel Filter
15393-4358-0	030003	150	Filter Cup
15401-6339-0	040501	110	Brush Spring
15511-9666-0	040501	180	O Ring
15531-2105-0	0102	020	Ring Assy
15531-2109-0	0102	020	Ring Assy, OS0.50mm
15531-2191-0	0102	010	Piston, OS 0.5mm
15532-2111-0	0102	010	Piston
15551-6376-0	040501	190	Bolt Assy
15601-5122-0	0203	050	Holder, Delivery Valve
15694-2201-0	0102	050	Connecting Rod Assy
15694-2231-0	0102	080	Metal, Crank Pin
15694-2297-0	0102	080	Metal, Crank Pin

